

TTY 大羽工業縫紉機

Industrial Sewing Machine



型 号: TTY-9628
MODEL:

零件分解圖


Spare Parts Book



池州市旭豪機械有限公司
CHIZHOU XUHAO MACHINERY CO., LTD


索引 INDEX	PAGE
01. 本體機構 ARM BED AND IT' S ACCESSORIES	01
02. 壓棒機構 PRESSER FOOT BAR MECHANISM	03
03. 天平及針棒搖動臺機構 TAKE-UP LEVER & NEEDLE BAR ROCKING MECHANISM	05
04. 縫線壓力調整機構 UPPER THREAD TENSION REGULATION MECHANISM	07
05. 上軸、主軸傳動機構 UPPER & MAIN SHAFT TRANSMISSION MECHANISM	09
06. 下送料、剪線機構 LOWER FEED & THREAD TRIMMING MECHANISM	11
07.1 輪錢、上邊心機構 ROLLER PRESSER FOOT & UPPER SIDE SHAFT MECHANISM	13
07.2 輪錢、上邊心機構（主動送料） ROLLER PRESSER FOOT & UPPER SIDE SHAFT MECHANISM	15
08. 右邊座機構 RIGHT SIDE BRACKET MECHANISM	17
09.1 單針中座機構 SINGLE NEEDLE CENTRAL BRACKET MECHANISM	19
09.2 單針中座機構（選配） SINGLE NEEDLE CENTRAL BRACKET MECHANISM	21
10. 隨機附件 ACCESSORIES	23
11. 電器連接圖 ELECTRICITY ELEMENTS FIG	25

01 本体机构 ARM BED AND IT'S ACCESSORIES

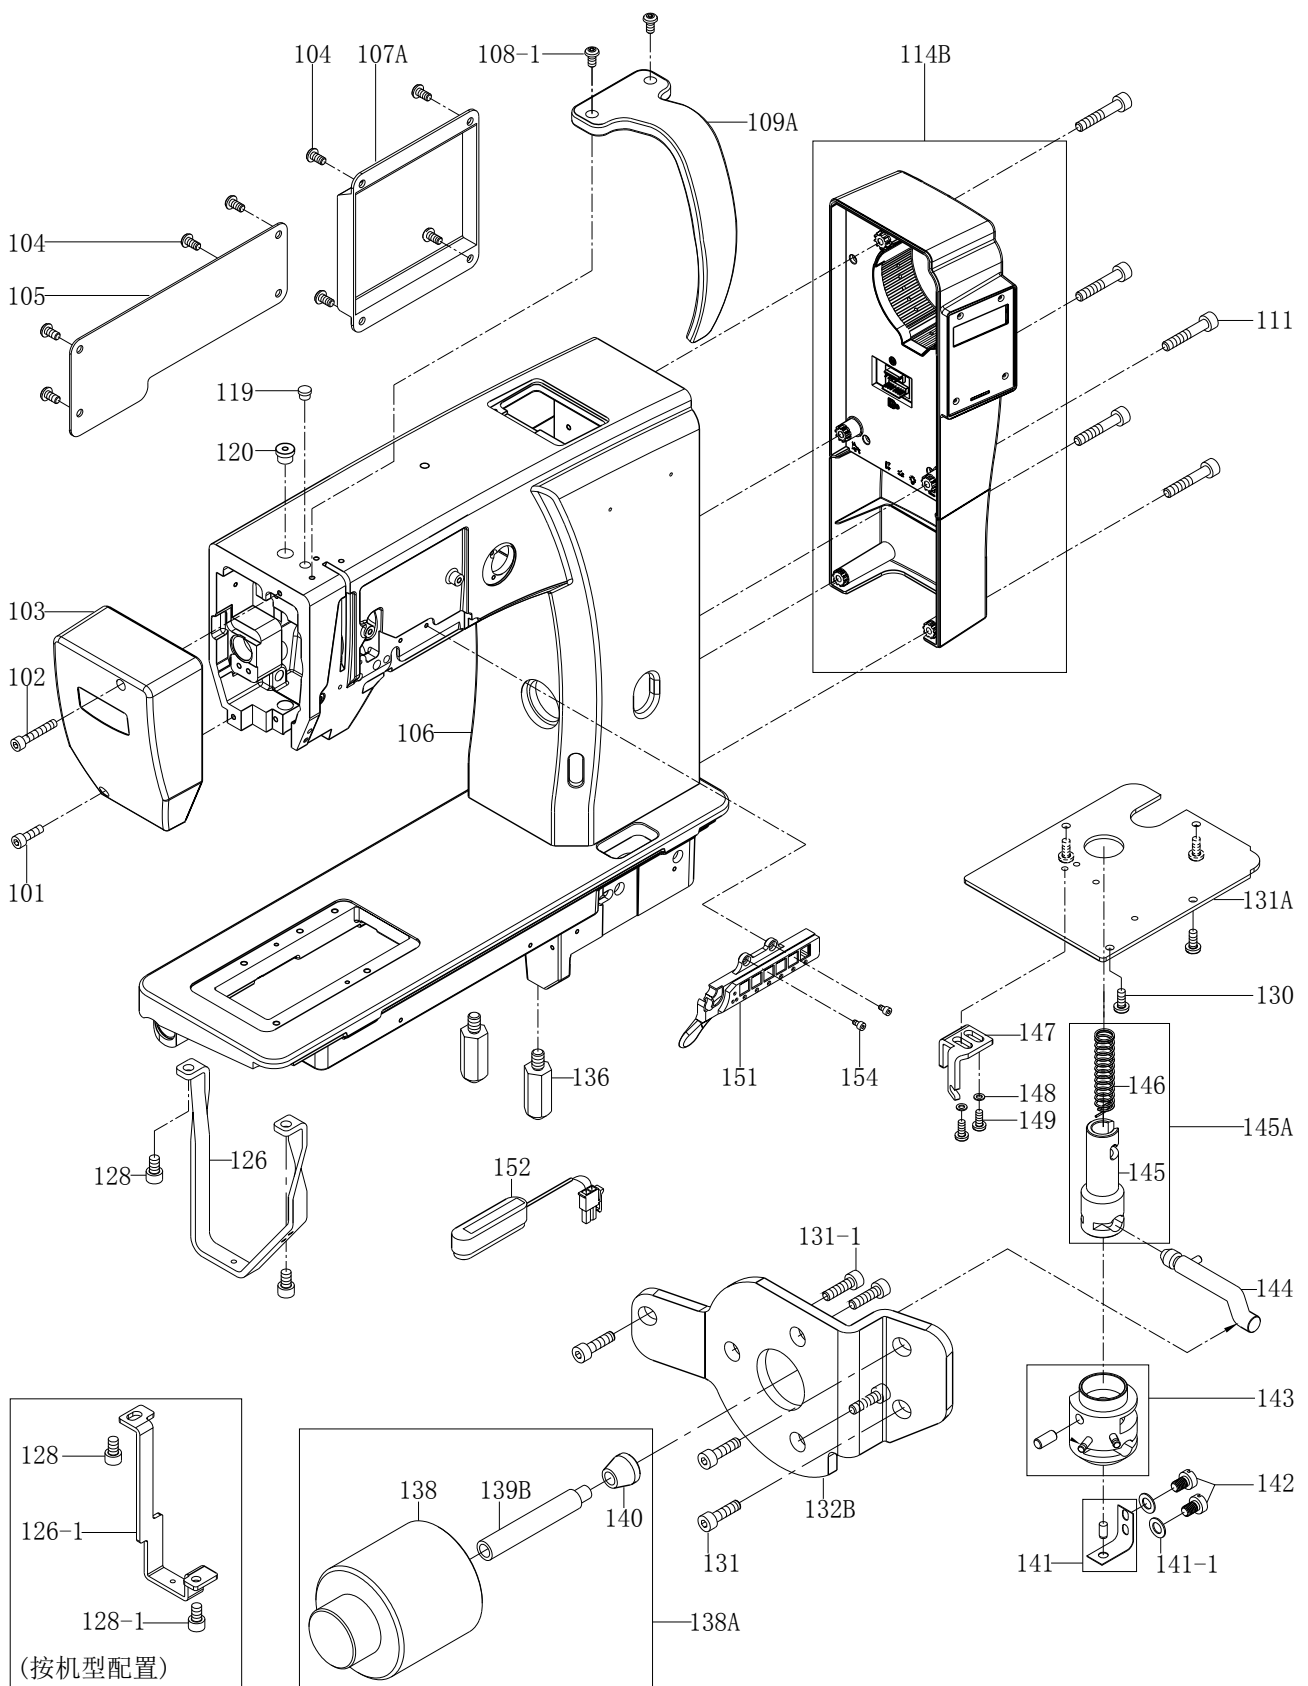

01. TY9628 本体机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
101	C01156	GB/T70.1	内六角圆柱头螺钉	M5*25	1
102	C01220	GB/T70.1	内六角圆柱头螺钉	M5*60	1
103	B0101237	TY9618-103	面罩		1
104	C01266	GB/T70.2	内六角盘头螺钉	M4*8（镀镍）	8
105	B01006005	TY9922-01-105	松线防护板		1
106	B01013058	TY9630-106	壳体组件		1
107A	B01006037	TY591-115-1	大防沙板		1
108-1	C01021	GB/T70.2	内六角盘头螺钉	M5*10（镀镍）	2
109A	B01007369	TY591-122A	天平盖		1
111	C01156	GB/T 70.1-2000	内六角圆柱头螺钉	M5*25	5
114	B0101276	TY9618-114B	电控组件	含电机	1
119	B01007257	TY591-133	油盖		1
120	D0101269	TY9618-120	压棒盖		1
131A	B01007012	TY591-123	底座座		1
126	B01007362	TY591-126	支架		1
128	C01125	GB/T70.1	内六角圆柱头螺钉	M6X12	2
126-1	B01007013	TY591-126-1	支架		1
128	C01125	GB/T70.1	内六角圆柱头螺钉	M6X12	1
128-1	C01137	GB/T70.1	内六角圆柱头螺钉	M5X10	1
130	B01001031	TY9910-022	一字圆柱头螺钉	M5X10	4
131	C01125	GB/T70.1	内六角圆柱头螺钉	M6X12	3
131-1	C01144	GB/T70.1	内六角圆柱头螺钉	M6X10	3
132B	B01006004	TY9922BFT-1020B	电磁铁架		1
136	B01007060	TY591-553B	六角钢		2
138A	B01007148	TY591-1006	抬压脚电磁阀	组件供应	1
141	B01007151	TY591-1009	压脚弹片组		1
141-1	C01022	GB/T 95-85	平垫圈	4	2
142	B01001078	TY9910-088	一字圆柱头螺钉	M4X8	2
143	B01007152	TY591-1012	脚架连接块(组件)		1
144	B01007153	TY591-1013	压脚提升弯杆		1
145A	B01007154	TY591-1014	脚架连杆头(组件)	组件供应	1
147	B01007199	TY591-1016	拉簧座		1
148	C01023	GB/T95	垫片 5	M5（发黑）	2
149	C01130	GB/T70.1	内六角圆柱头螺钉	M5X8	2
151	B0101275	TY9618-151	微动开关组件（沪龙）		1
152	B01007386	TY591-F020	台灯/5V/沪龙		1
154	C01139	GB/T 70.1-2000	内六角圆柱头螺钉 M4*8	M4*8	2


02 压棒机构 PRESSER FOOT BAR MECHANISM

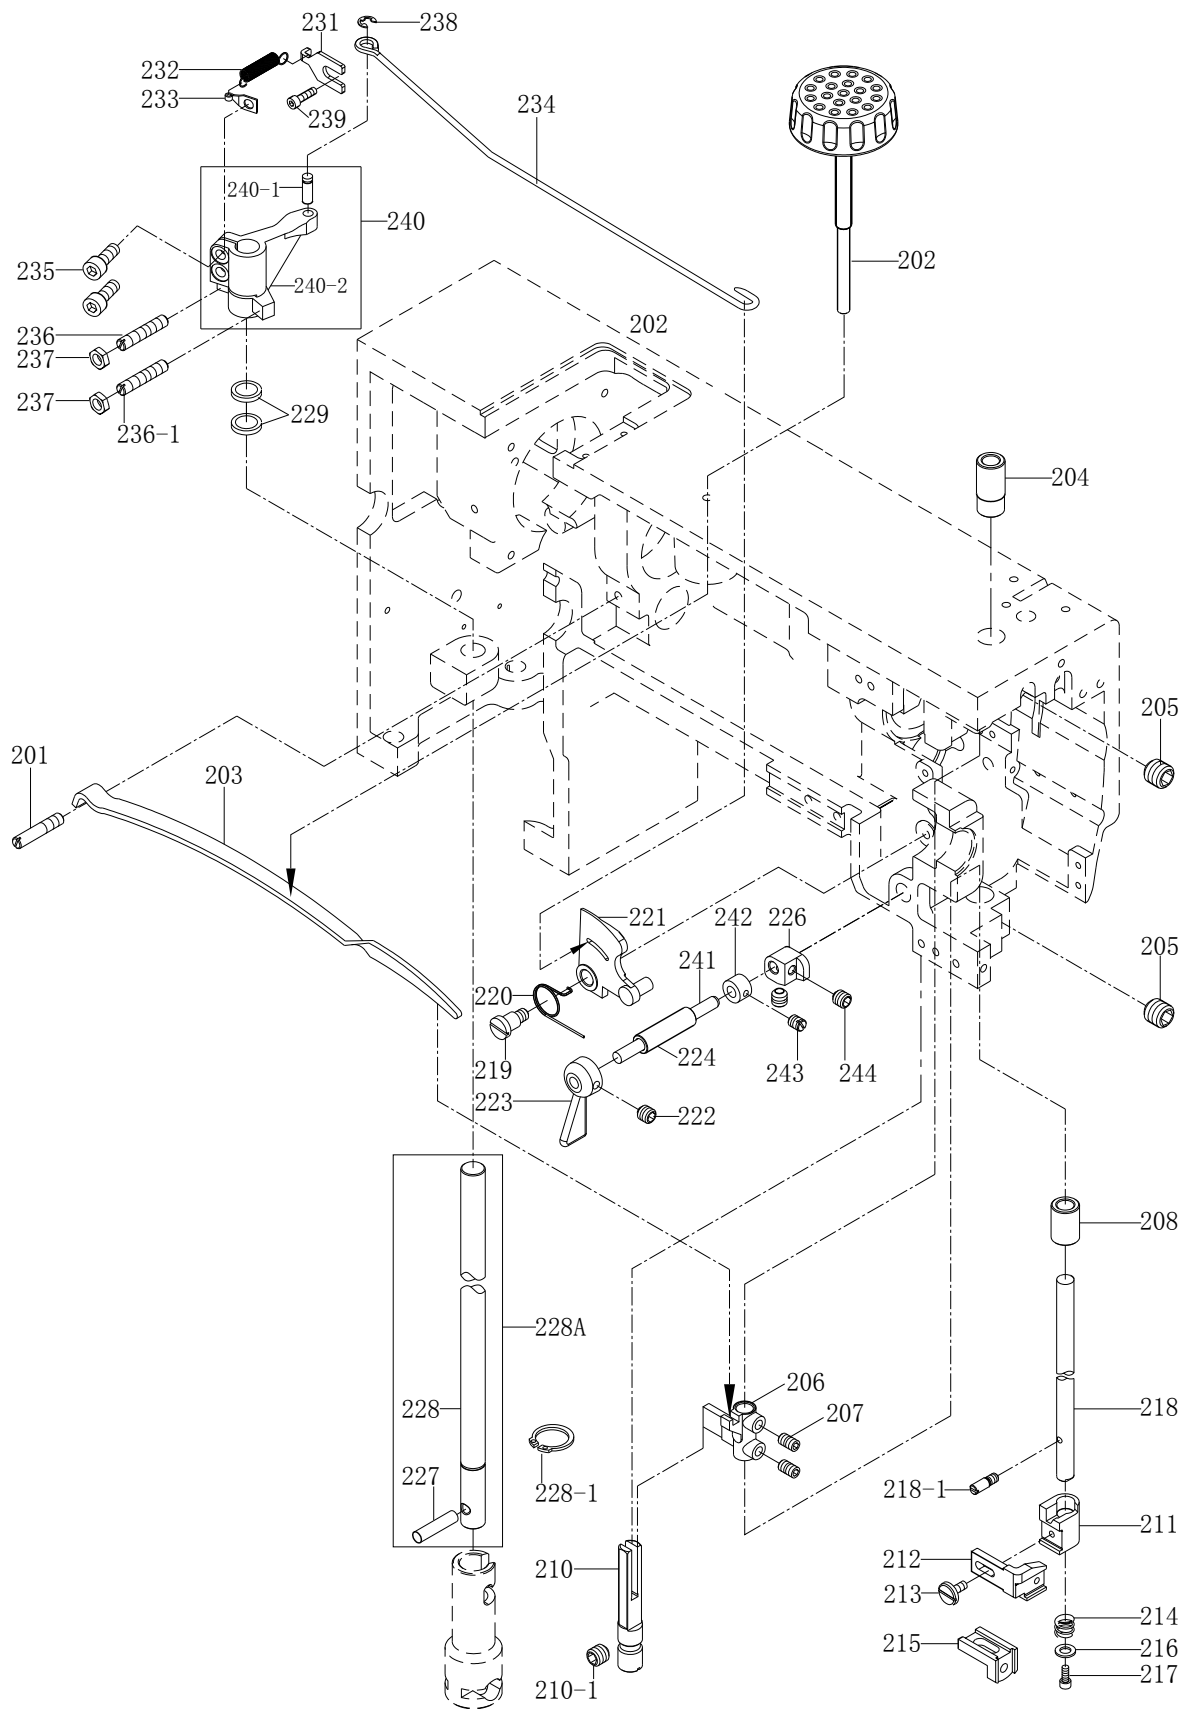

02. TY9628 压棒机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
201	B01001098	TY9910-119	一字无头螺丝		1
202	B0101235	TY9618-202	一字无头调压螺丝	组件	1
203	B0101214	TY9618-203C	弹片压板		1
204	B01001103	TY9910-124	压棒上套管		1
205	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	2
206	B01001105	TY9910-126	压棒固定座		1
207	B01001080	TY9910-094	内六角无头螺丝	M6X0.75X6	2
208	B01001106	TY9910-127	压棒下套管		1
210	B01001112	TY9910-133	导轨棒		1
210-1	C01088	GB/T80-2000	内六角凹端紧定螺钉	M5X8	1
211	B01007357	TY591-211	轮前下座		1
212	B01007366	TY591-212	轮前连接座		1
213	B01001052	TY9910-051	一字圆柱头螺丝		1
214	B01001109	TY9910-130	弹簧		1
215	B01001110	TY9910-131	顶针座		1
216	C01022	GB/T 95-85	垫圈 4		1
217	B01001111	GB/T 5781-2000	六角头螺栓	M4*8	1
218	B01006239	TY9922BFT-02-218	压棒		1
218-1	B01007361	TY9922BFT-218-1	螺钉		1
219	B01001100	TY9910-121	一字圆柱头螺丝		1
220	B01001101	TY9910-122	弹簧		1
221	B01001102	TY9910-123	沙拉心座组		1
222	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	1
223	B01001093	TY9910-114	压棒提杆		1
224	B01006017	TY9922BFT-02-224	压棒提杆套管		1
226	B01007019	TY591-226	压棒提升器		1
228A	B01001124	TY9910-148	压脚长轴	组件	1
228-1	C0196	GB/T894. 1-86	轴用挡圈	12	1
229	B01001123	TY9910-147-1	调整垫片		2
231	B01001119	TY9910-143	弹簧固定板		1
232	B02001082	TY801-076	离合拉簧		1
233	B01001121	TY9910-145	弹簧固定板		1
234	B0101208	TY9618-234C	脚弓连接杠杆		1
235	C01132	GB/T70-85	内六角圆柱头螺钉	M5X12（发黑）	2
236	C01177	GB/T78	内六角锥端紧定螺钉	M6X30	1
236-1	C01109	GB/T77	内六角平端紧定螺钉	M6X35	1
237	C01069	GB/T6170	六角螺母	M6	2
238	B01001120	TY9910-144	开口挡圈	M4	1
239	C01131	GB/T70. 1	内六角圆柱头螺钉	M6X8（发黑）	1
240	B01001122	TY9910-147	上下输送臂		1
241	B01007018	TY591-224	压棒提杆轴		1
242	B01007022	TY591-239	锁圈		1
243	C01092	GB/T80-2000	内六角凹端紧定螺钉	M4X4	2
244	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	2

03 天平及針棒搖動臺機構

TAKE-UP LEVER & NEEDLE BAR ROCKING MECHANISM

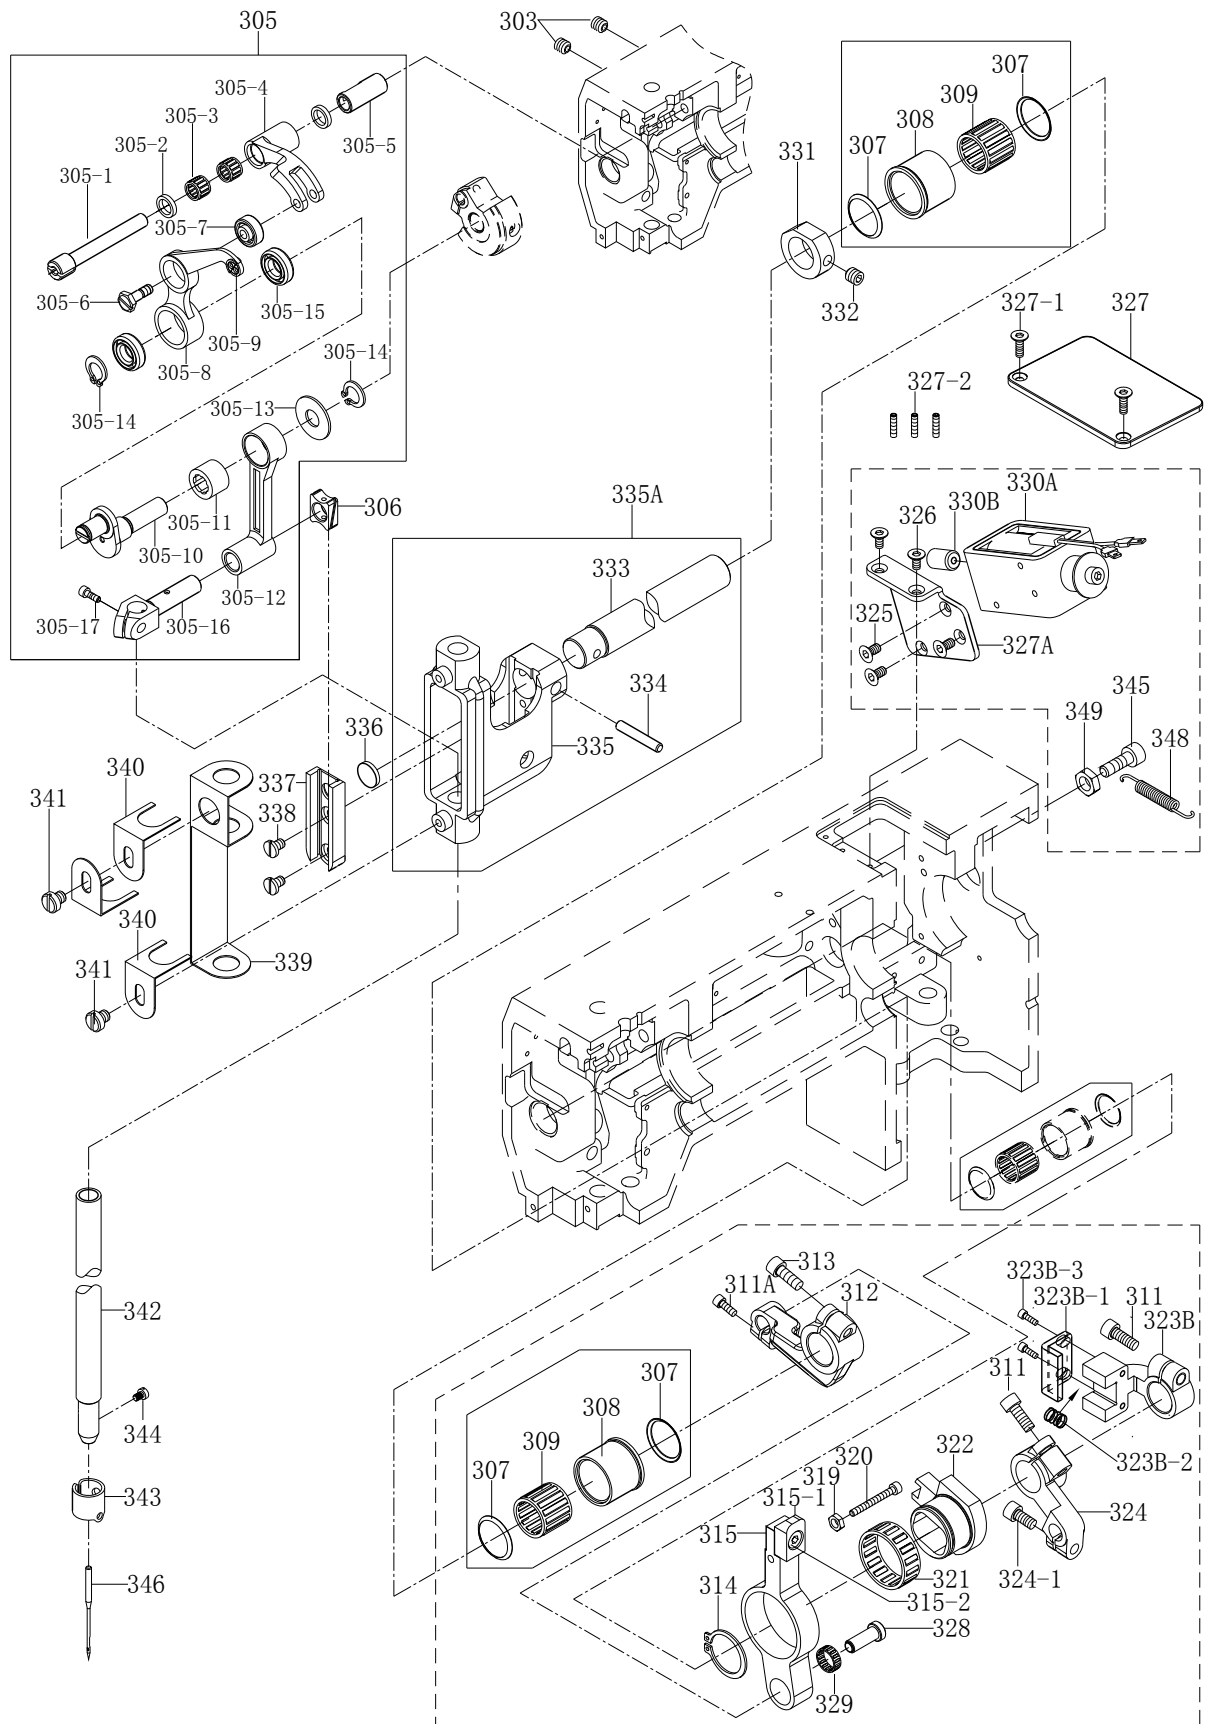

03. TY9628 天平及针棒摇动台机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
303	C01088	GB/T80-2000	内六角凹端紧定螺钉	M5X8	2
305	B01007023	TY591-305	天秤组件		1
306	B01001075	TY9910-086	针棒道引滑块		1
307	B01001089	TY9910-107	盘形垫片		4
308	B01001091	TY9910-109	套管		2
309	B01001090	TY9910-108	针状培林		2
311	C01129	GB/T70.1	内六角圆柱头螺钉	M6X16（发黑）	2
311A	C01132	GB/T 70.1-2000	内六角圆柱头螺钉 M5*12		1
312	B01007025	TY591-312	针送支臂		1
313	C01222	GB/T70.1	内六角圆柱头螺钉	M5X14（发黑）	1
314	C0197	GB/T 894.1-86	轴用弹性挡圈-A型 24		1
315	B01007179	TY591-315	凸轮连杆		1
315-1	B01006118	TY9922BFT-315B	凸轮连杆接块		1
315-2	C01128	GB/T70.1	内六角圆柱头螺钉	M4X6（发黑）	1
319	C01070	GB/T6170	螺母	M4	1
320	C0189	GB/T70.1	内六角圆柱头螺钉	M4X30（发黑）	1
321	B01001132	TY9910-159	针状培林		1
322	B01007028	TY591-322	滑块凸轮		1
323B	B01007401	TY591-323B	滑块凸轮导向座		1
323B-1	B01007402	TY591-323B-1	固定块		1
323B-2	B03001199	TY335-140	弹簧		1
323B-3	C01169	GB/T70.1	内六角圆柱头螺钉	M3*6（发黑）	2
324	B01006152	TY9922BFT-03-324	滑块凸轮摆杆		1
324-1	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	1
325	C01100	GB/T70.3-2000	内六角沉头螺钉	M4X6（发黑）	2
326	C0193	GB/T70.3-2000	内六角沉头螺钉	M4X8（镀镍）	2
327	B01006019	TY9922BFT-03-327	盖板		1
327-1	C0195	GB/T70.3-2000	内六角沉头螺钉 M4*12		2
327-2	C01194	GB/T80	内六角凹端紧定螺钉	M4*10	3
327A	B01006020	TY9922-03-327A	电磁铁固定板		1
328	B01001114	TY9910-136	固定（短）销		1
329	B01001115	TY9910-137	针状培林		1
330A	B01007032	TY591-330	针摆电池铁（倒针切换）	330A	1
330B	B01007250	TY591-641	尼龙垫		1
331	B01001088	TY9910-106	固定环		1
332	B01001080	TY9910-094	内六角无头螺丝M6*0.75*6		1
335A	B0101204	TY9618-333C	针棒座组件	组件供应	1
336	B01001077	TY9910-087B	油棉		1
337	B01001076	TY9910-87	针棒连接器导槽		1
338	B01001078	TY9910-88	一字圆柱头螺丝		2
339	B01001087	TY9910-101A	油棉		1
340	B01001082	TY9910-99	油棉压板		3
341	B01001078	TY9910-088	一字圆柱头螺丝		1
341-1	B01001081	TY9910-098	一字圆柱头螺丝		1
342	B01001072	TY9910-077	单针针棒		1
343	B01001074	TY9910-079	针棒套环		1
344	B01001073	TY9910-078	螺钉 M3*0.5*4		1
346	B01001257		车针 INDPX5#16		6
348	B01007473	TY591-348B	拉簧		1


This exploded view diagram illustrates the assembly of a mechanical component, likely a door latch or handle. The main assembly is shown in a dashed-line perspective. Key components and their callouts include:

- 401**: A long, flat metal plate with four mounting holes.
- 402**: A small screw used to secure the plate.
- 405**: A small circular component, possibly a pin or a small wheel.
- 406**: A larger circular component with a textured surface, possibly a roller or a wheel.
- 407**: A small screw used for internal assembly.
- 409**: A small metal bracket or pin.
- 413A**: A small metal bracket or pin.
- 414**: A small metal bracket or pin.
- 416-1**: A small metal bracket or pin.
- 417**: Two screws used for mounting.
- 418**: A small metal bracket or pin.
- 410-1**: A long metal rod or pin.
- 404**: A sub-assembly consisting of multiple parts:
 - 404-1**: A small screw.
 - 404-2**: A small washer or spacer.
 - 404-3**: A small washer or spacer.
 - 404-4**: A small washer or spacer.
 - 404-5**: A coiled spring.
 - 404-6**: A small washer or spacer.
 - 404-7**: A small washer or spacer.
 - 404-8**: A small washer or spacer.
 - 404-9**: A small washer or spacer.
 - 404-10**: A small washer or spacer.
 - 404-11**: A small washer or spacer.
 - 404-12**: A small washer or spacer.
 - 404-13**: A small washer or spacer.
 - 404-14**: A small washer or spacer.
 - 404-15**: A small washer or spacer.
 - 404-16**: A small washer or spacer.
 - 404-17**: A small washer or spacer.
 - 404-18**: A small washer or spacer.
 - 404-19**: A small washer or spacer.
 - 404-20**: A small washer or spacer.
 - 404-21**: A small washer or spacer.
 - 404-22**: A small washer or spacer.
 - 404-23**: A small washer or spacer.
 - 404-24**: A small washer or spacer.




04. TY9628 缝线压力调整机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
401	D0101276	TY9618-401	过线板		1
402	C01266	GB/T70. 2	内六角半圆头螺钉	M4*8 (镀镍)	2
404	B01007035	TY591-404	打线器		1
405	C0184	GB/T80-2000	内六角凹端紧定螺钉	M6X8	2
406	B01007036	TY591-406B	锥形传动轮		1
407	C0193	GB/T68	开槽沉头螺钉	M4x8 (镀镍)	1
408	B01001022	TY9910-013	导线架		1
409	C01021	GB/T70. 2	内六角半圆头螺钉	M5*10 (镀镍)	1
410	B01007038	TY591-410	松线销组件		1
410-1	D0101281	TY9618-410-1	塞垫		1
411	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	1
412	B0101207	TY9618-412	沙拉组组件 (单双共用座板)		1
413A	B0101255	TY9618-413A	过线板		1
414	B01007269	TY591-414	调整螺母		1
415	C01021	GB/T70. 2	内六角半圆头螺钉	M5*10 (镀镍)	2
416	B01007042	TY591-416	松线阀座		1
416-1	C01169	GB/T70. 1	内六角圆柱头螺钉	M3*6 (发黑)	2
417	C01106	GB/T70. 3-2000	内六角沉头螺钉	M5X10	2
418	B01007043	TY591-418	电磁阀 (松线)		1

05 上軸、主軸傳動機構 UPPER & MAIN SHAFT TRANSMISSION MECHANISM

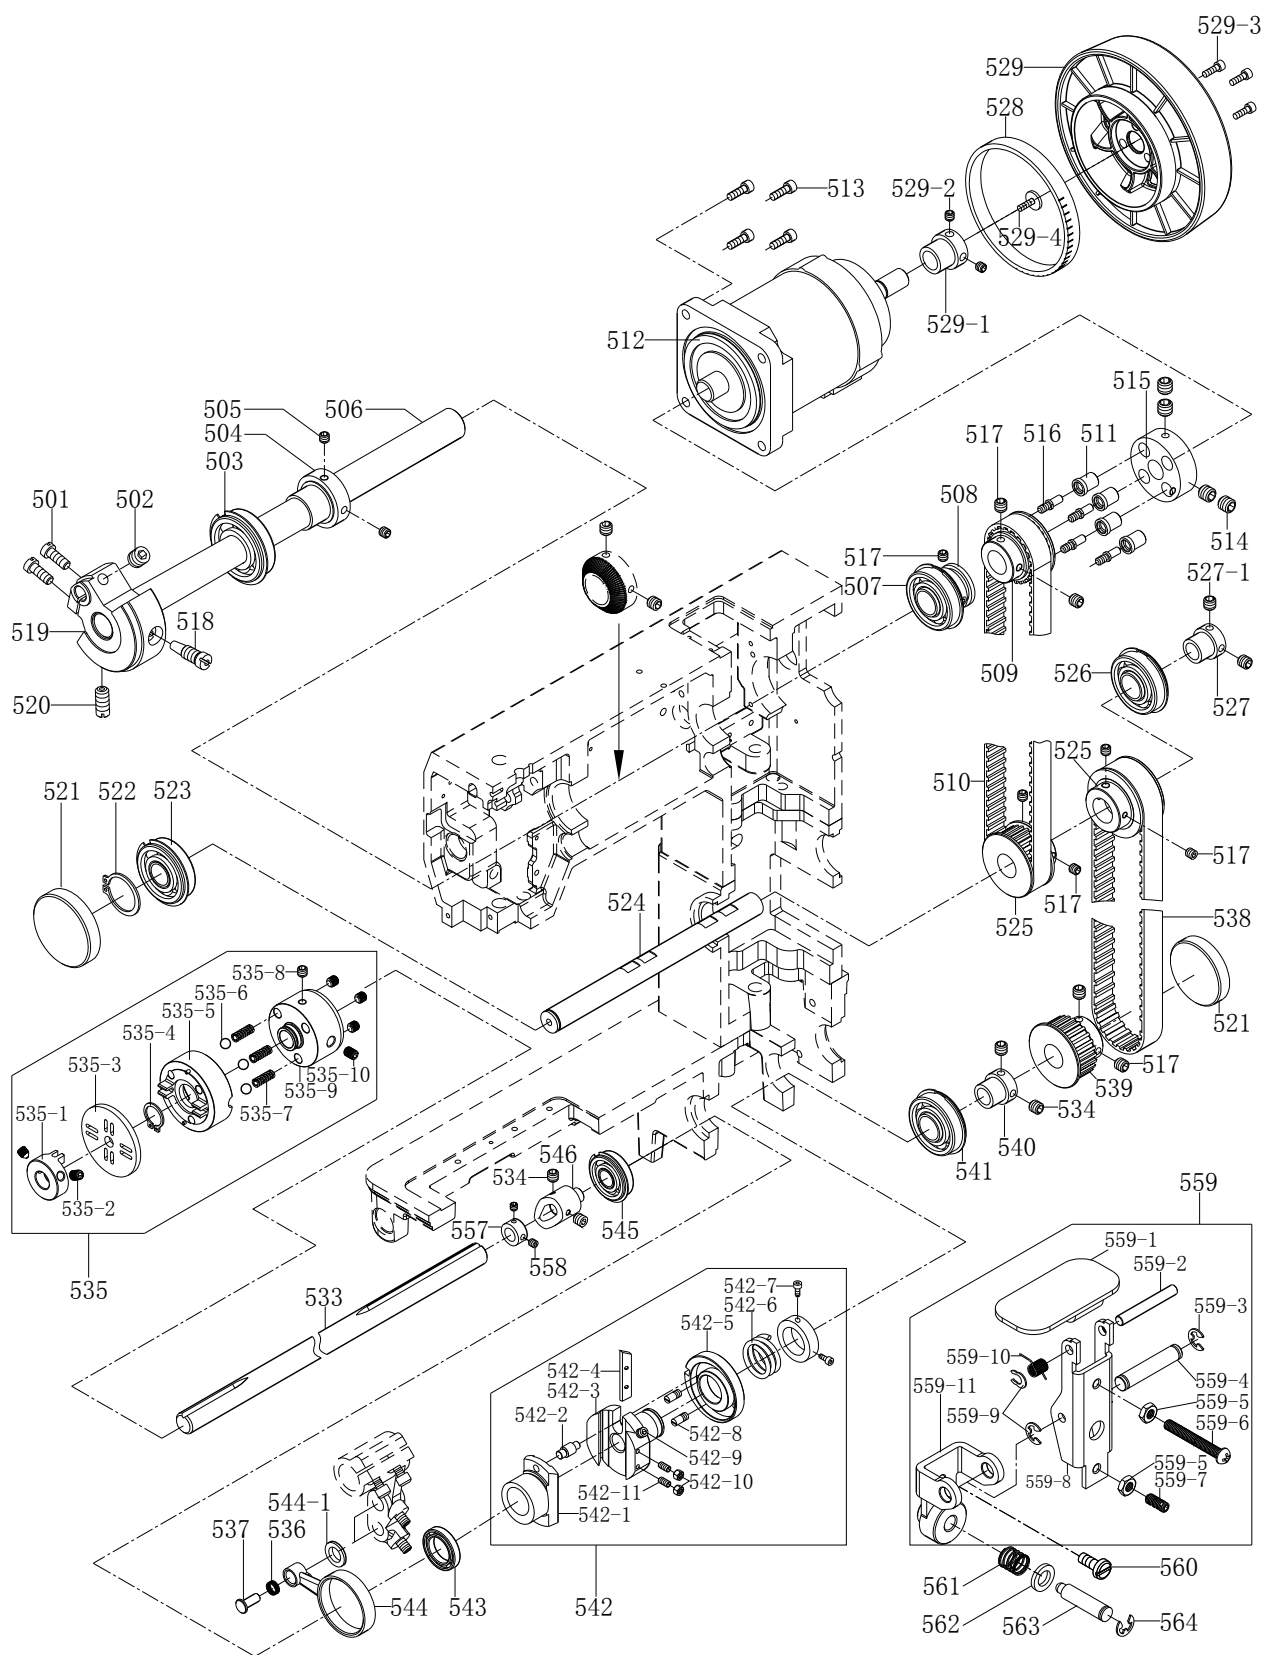

05. TY9628 上轴及主传动机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
501	B01001143	TY9910-171	螺钉 (M5*13)		2
502	B01001080	TY9910-094	螺钉 (M6*0.75*6)		2
503	B01001148	TY9910-175	滚珠培林 BB6204ZZNR		1
504	B01001146	TY9910-173	上轴套环		1
505	B01001080	TY9910-094	螺钉 (M6*0.75*6)		2
506	B0101210	TY9618-506C	上轴		1
507	B01001153	TY9910-179	滚珠培林	BB6004ZZNR	1
508	B01001154	TY9910-180	上轴套管		1
509	B01006025	TY9922-05-509	齿形皮带轮		1
510	B01001149	TY9910-177	同步带		1
511	B01006026	TY9922-05-511	橡胶衬套		4
512		TY9618-512	电机	电控组件内	0
513	C01159	GB/T70.1	内六角圆柱头螺钉	M5*16 (发黑)	4
514	B01001080	TY9910-094	内六角无头螺丝 M6X0.75X6		4
515	B01006029	TY9922-05-515	连接盘		1
516	B01006015	TY9922-05-516	销钉		4
517	B01001080	TY9910-094	内六角无头螺丝 M6X0.75X6		8
518	B01001142	TY9910-170	一字半圆头定位螺丝		1
519	B01001144	TY9910-172	凸轮		1
520	B01001145	TY9910-172-1	一字无头螺丝		1
521	B01001160	TY9910-186	保护盖		1
522	B01001161	TY9910-187	C型扣环		1
523	B01001162	TY9910-188	滚珠培林 BB6203ZZNR		1
524	B0101264	TY9618-524C	中轴		1
525	B01001151	TY9910-178	齿形带轮(上)		2
526	B01001153	TY9910-179	滚珠培林	BB6004ZZNR	1
527	B01001154	TY9910-180	上轴套管		1
527-1	B01001080	TY9910-094	内六角无头螺丝 M6X0.75X6		2
528	B01001159	TY9910-184-1	缝目指示环		1
529	B0101243	TY9618-529	手轮		1
529-1	B0101266	TY9618-529-1B	手轮连接盘		1
529-2	C0184	GB/T80-2000	内六角凹端紧定螺钉	M6*8	2
529-3	C01021	GB/T2672-86	内六角平圆头螺钉	M5*10	2
529-4	C0199	ISO 7380-2	内六角圆头带垫螺钉	M6*10	1
533	B0101270	TY9618-533	万向连接轴(长)		1
534	B01001080	TY9910-094	螺钉 (M6*0.75*6)		2
535	B01007049	TY591-526	离合器组件		1
536	B01001115	TY9910-137	针状培林		1
537	B01001340	TY9910-160C	固定销 (26)		1
538	B01001150	TY9910-177-1	同步带		1
539	B01001167	TY9910-192	齿形带轮(下)		1
540	B01001168	TY9910-193	轴承套管(右)		1
541	B01001162	TY9910-188	滚珠培林 BB6203ZZNR	BB6203ZZNR	1
542	B01001175	TY9910-203	凸轮组件		1
543	B94010	TY9910-201	滚珠培林	61906ZZ	1
544	B01001174	TY9910-202	连杆		1
544-1	B03001103	TY335-064-01	垫片		1
545	B01001166	TY9910-191	滚珠培林	BB6202ZZNR	1
546	B01007054	TY591-545	剪线凸轮		1
557	B01007278	TY591-855	定环		1
558	C01085	GB/T80-2000	内六角凹端紧定螺钉	M5*4	2
559	B01007044	TY591-501	送料调整按钮(组件)		1
560	C0221	GB/T65	开槽圆柱头螺钉	M4X10	1
561	B01007097	TY591-728	压簧		1
562	C01020	GB/T95-85	平垫圈	M6	1
563	B01007047	TY591-505	按钮销		1
564	B01001120	GB/T896	开口挡圈	M4	1


06 下送料、剪線機構 LOWER FEED & THREAD TRIMMING MECHANISM

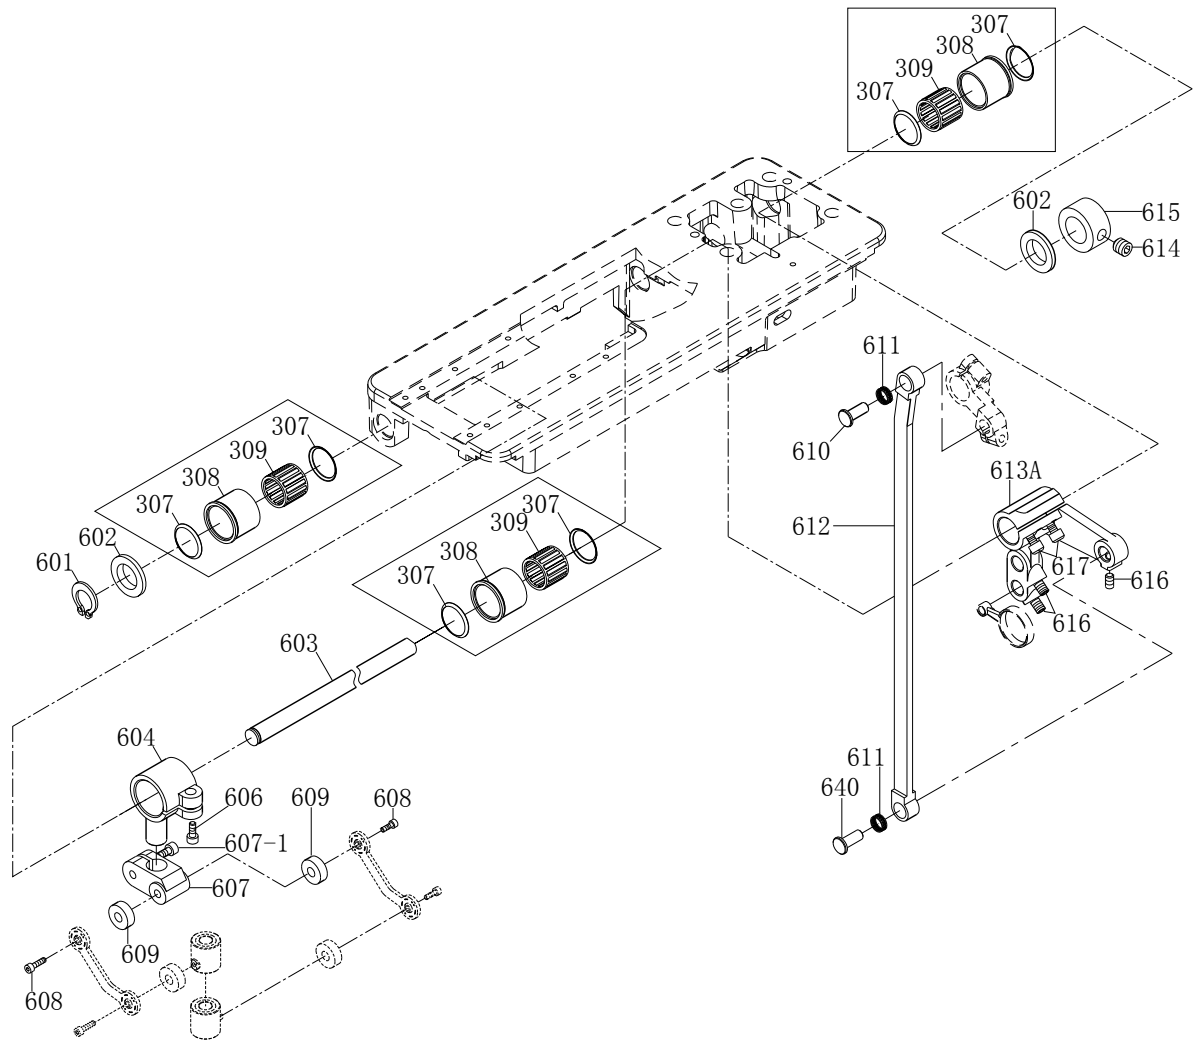

06. TY9628 下送料及剪线机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
307	B01001089	TY9910-107	盘形垫片		6
308	B01001091	TY9910-109	培林套管		3
309	B01001090	TY9910-108	针状培林		3
601	C01043	GB/894.1	轴用挡圈	M15	1
602	B01001140	TY9910-168	垫片		2
603	B0101212	TY9618-603C	下送料轴		1
604	B01001128	TY9910-155	万向连接头		1
606	C01132	GB/T70.1	内六角圆柱头螺钉	M5*12（发黑）	1
607	B01001127	TY9910-152	万向连接座		1
607-1	C01134	GB/T70.1	内六角圆柱头螺钉	M4*10（发黑）	1
608	C01134	GB/T70.1	内六角圆柱头螺钉	M4*10（发黑）	2
609	B01001048	TY9910-042	油棉垫		2
610	B01001340	TY9910-160C	固定销（长）		1
611	B01001115	TY9910-137	针状培林		2
612	B01001116	TY9910-138	连杆		1
613A	B01007071	TY591-615	单向输送支臂		1
614	B01001080	TY9910-094	螺钉（M6*0.75*6）		2
615	B01001079	TY9910-093	固定环		1
616	C01212	GB/T80-2000	内六角凹端紧定螺钉	M6*6	2
617	C01159	GB/T70.1	内六角圆柱头螺钉	M5*16（发黑）	2
640	B01001340	TY9910-160C	固定销（长）		1

07.1 輪前、上邊心(一代/外离合)機構 (选配)


ROLLER PRESSER FOOT & UPPER SIDE SHAFT MECHANISM

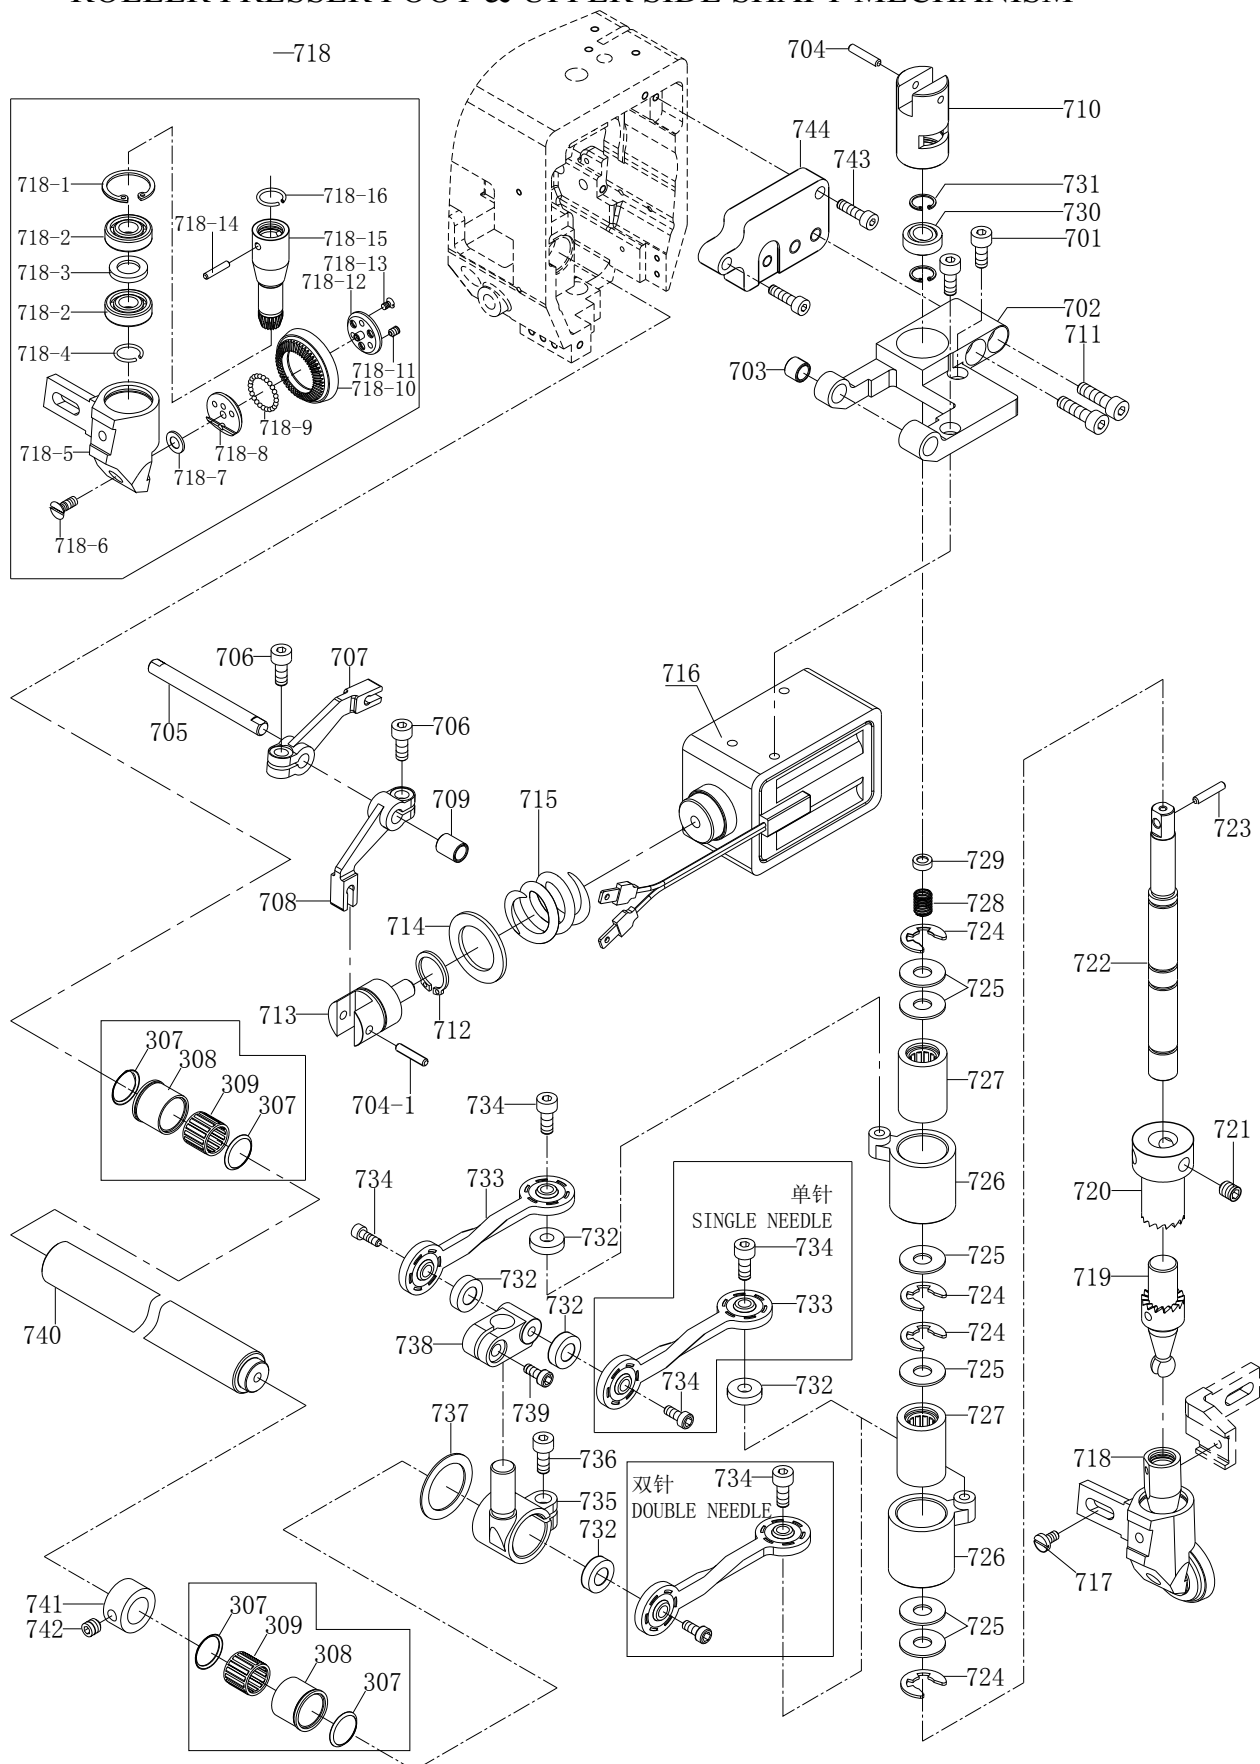

07.1 TY9628 轮前及上边心机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
307	B01001089	TY9910-107	盘形垫片		4
308	B01001091	TY9910-109	培林套管		2
309	B01001090	TY9910-108	针状培林		2
701	C01128	GB/T70.1-2000	内六角圆柱头螺钉 M4*6		2
702	B01007451	TY591-702	轮前倒针座		1
703	B01007085	TY591-703	后套		1
704	C0207	GB/T119-2000	圆柱销 3x18 (u级)		1
704-1	C0186	GB/T119-2000	圆柱销 3x16 (u级)		1
705	B01007086	TY591-705	固定销		1
706	C01130	GB/T70.1-2000	内六角圆柱头螺钉 M5*8		2
707	B01007087	TY591-707	离合器后摆杆		1
708	B01007088	TY591-708	离合器前摆杆		1
709	B01007089	TY591-709	前套		1
710	B01007090	TY591-710	万向培林座		1
711	C01158	GB/T70.1-2000	内六角圆柱头螺钉 M6*30		2
712	C0203	GB/T894.1-86	轴用挡圈 16		1
713	B01007091	TY591-713	摆杆连接块		1
714	B01007264	TY591-714	垫片		1
715	B01007092	TY591-715	压簧		1
716	B01007093	TY591-716	上轮钱倒针电磁阀		1
717	B01001052	TY9910-051	一字圆柱头螺丝		1
718	B01007277	TY591-718	轮钱组件/30中号/白色		1
719	B01007094	TY591-719	轮钱倒针下离合器		1
720	B01007095	TY591-720	轮钱倒针上离合器		1
721	B01001080	TY9910-094	内六角无头螺丝 M6X0.75X6		2
722	B01007096	TY591-722	滚轮联接轴上节		1
723	C01278	GB/T879.1-2000	弹性销 3*10		1
724	B01001042	TY9910-037	E型扣环		4
725	B01001043	TY9910-038	调整垫片		6
726	B01001049	TY9910-043	单向培林座		2
727	B01001045	TY9910-039	针状培林		2
728	B01007097	TY591-728	压簧		1
729	B01007098	TY591-729	垫圈		1
730	B01001040	TY9910-035	万向培林		1
730	B01001041	TY9910-036	C行扣环		2
732	B01001048	TY9910-042	油棉垫		4
733	B01001047	TY9910-041	万向连杆		2
734	C01134	GB/T 70.1-2000	内六角圆柱头螺钉	M4*10	4
735	B01001128	TY9910-155	万向连接头		1
736	C01132	GB/T 70.1-2000	内六角圆柱头螺钉	M5*12	1
737	B01001140	TY9910-168	垫片		1
738	B01001127	TY9910-152	万向连接座		1
739	C01134	GB/T 70.1-2000	内六角圆柱头螺钉	M4*10	1
740	B0101211	TY9618-740C	上边心轴		1
741	B01001088	TY9910-106	固定环		1
742	B01001080	TY9910-094	内六角无头螺钉M6*0.75*6		1
743	C01159	GB/T 70.1-2000	内六角圆柱头螺钉	M5*16	2
744	B0101278	TY9618-744	连接块		1


07.2 輪钱、上邊心機構 (主动送料)

ROLLER PRESSER FOOT & UPPER SIDE SHAFT MECHANISM

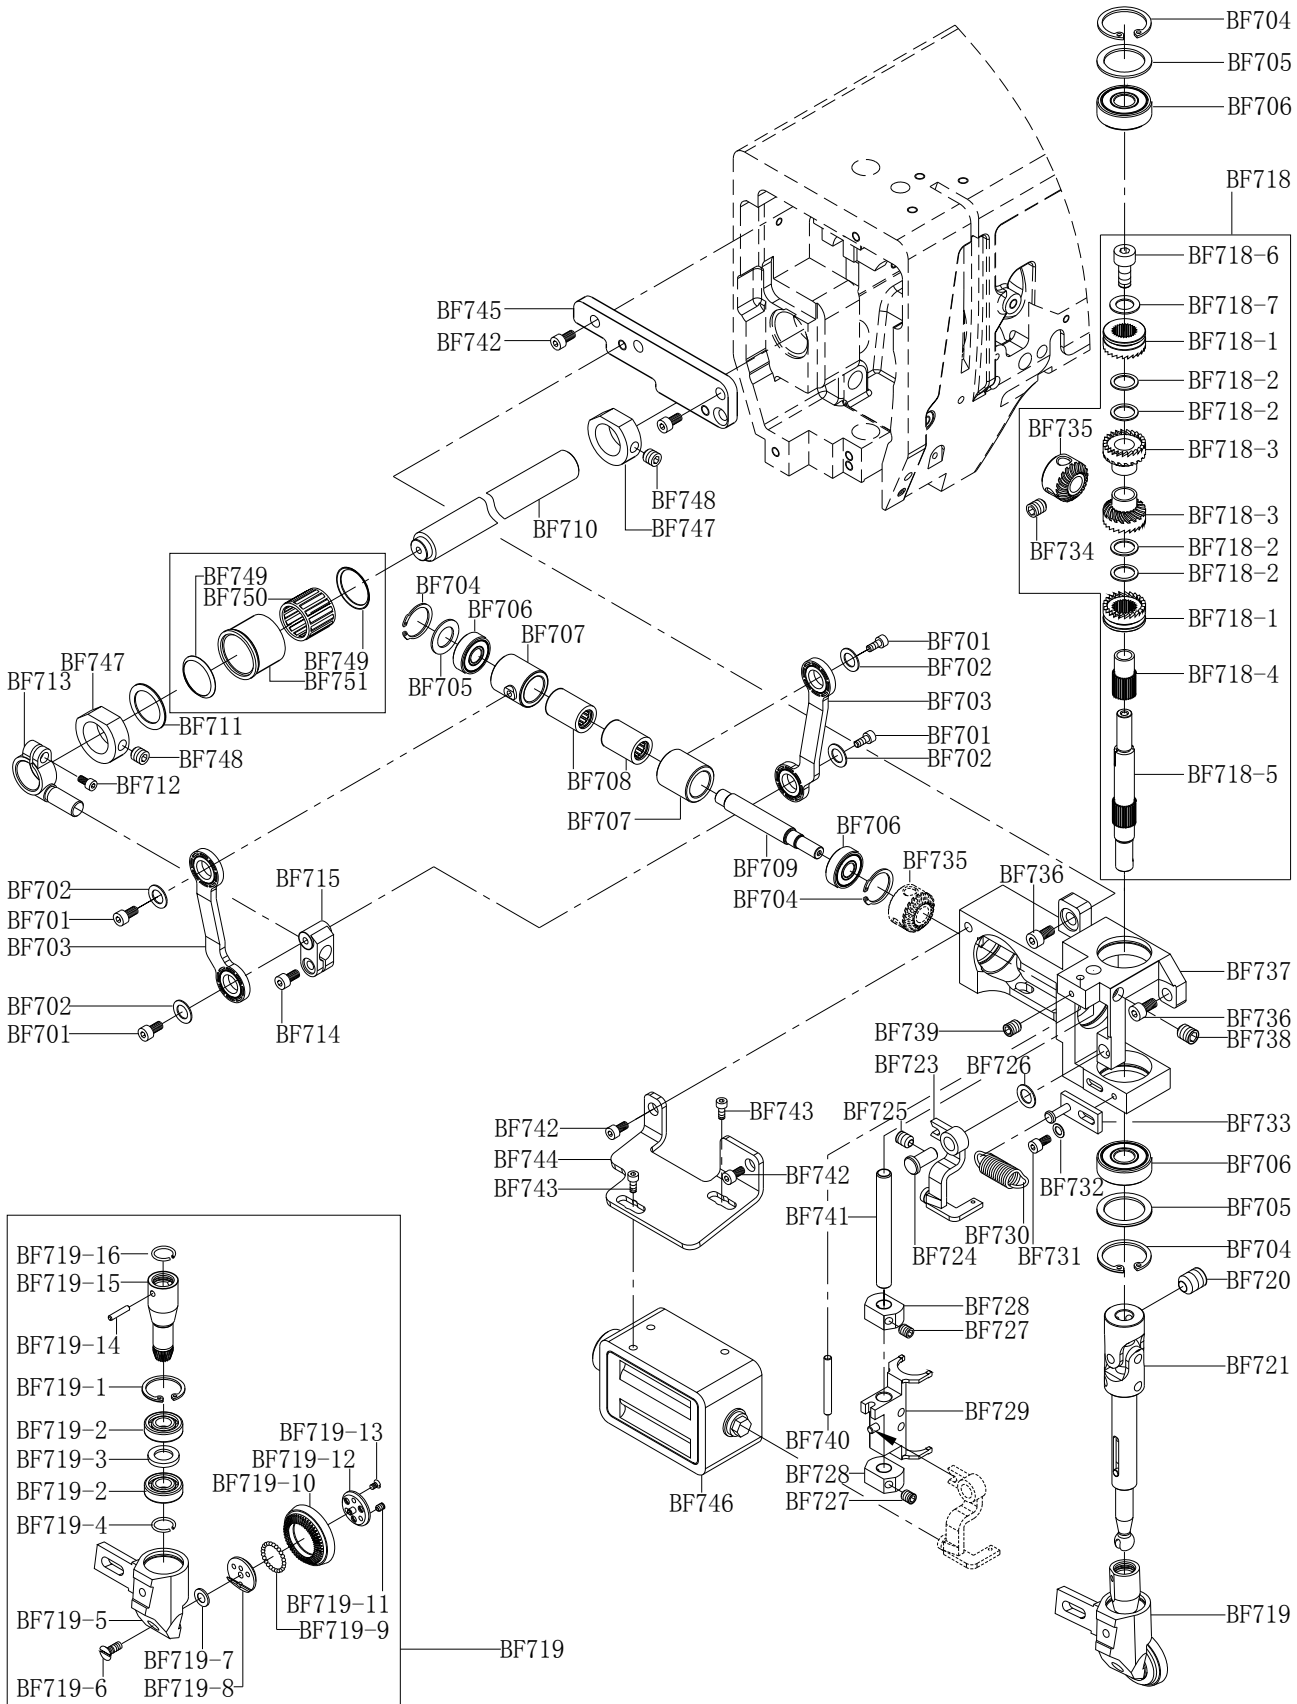

07.2 TY9628 轮前及上边心机构零件明细（选配）					
分解图号	用友编码	零件图号	零件名称	备注	用量
BF701	C01134	GB/T70.1	内六角圆柱头螺钉	M4*10（发黑）	4
BF702	B01001048	TY9910-042	油棉垫		4
BF703	B01019001	TY9618-BF703	万向连杆		2
BF704	B01001194	TY9910-220	C型扣环		2
BF705	B01019002	TY9618-BF705	调整垫片		3
BF706	B0100127	TY9910-221	轴承 608ZZ		4
BF707	B01007450	TY591-928S	单向培林座		2
BF708	B01001335	TY9910-039	针状培林		2
BF709	B01019005	TY9618-BF709	培林轴		1
BF710	B01007217	TY591-740	上边心轴		1
BF711	B01001140	TY9910-168	垫片		2
BF712	C01132	GB/T70.1	内六角圆柱头螺钉	M5*12（发黑）	1
BF713	B01001141	TY9910-169	万向连接头		1
BF714	C01134	GB/T70.1	内六角圆柱头螺钉	M4*10（发黑）	1
BF715	B01001127	TY9910-152	万向连接座		1
BF718	B01019006	TY9618-BF718	倒缝齿轮芯轴组件		1
BF719	B01007277	TY591-718	轮钱组件		1
BF720	C01085	GB/T80	内六角凹端紧钉螺钉	M5*4（发黑）	4
BF721	B01018023	TY9618-BF721	万向连轴器		1
BF723	B01019007	TY9618-BF723	倒针摆杆		1
BF724	B01019008	TY9618-BF724	旋转轴		1
BF725	C01093	GB/T80	内六角凹端紧钉螺钉	M4*6（发黑）	1
BF726	B01019009	TY9618-BF726	垫片		1
BF727	C01083	GB/T80-2000	内六角凹端紧钉螺钉	M4*5（发黑）	4
BF728	B01019010	TY9618-BF728	锁圈		2
BF729	B01019011	TY9618-BF729	弓形件		1
BF730	B01019012	TY9618-BF730	拉簧		1
BF731	C01142	GB/T70.1	内六角圆柱头螺钉	M3*8（发黑）	1
BF732		GB/T95-85	垫片 3		1
BF733	B01016005	TY9922BFT-921DG	拉簧固定座		1
BF736	C01132	GB/T70.1	内六角圆柱头螺钉	M5*12（发黑）	2
BF737	B01019013	TY9618-BF737	轮钱倒缝座		1
BF738	C01086	GB/T80	内六角凹端紧钉螺钉	M5*6（发黑）	1
BF739	C01237	GB/T80	内六角凹端紧钉螺钉	M3*4（发黑）	1
BF740	C01049	GB/T119	圆柱销(B型-h级)	3X28	1
BF741	B01019014	TY9618-BF741	弓形件滑动轴		1
BF742	C01137	GB/T70.1	内六角圆柱头螺钉	M5*10（发黑）	2
BF743	C01139	GB/T70.1	内六角圆柱头螺钉	M4*8（发黑）	2
BF744	B01019015	TY9618-BF744	电磁铁固定板		1
BF745	B0101279	TY9618-745	连接板		1
BF746	B01007093	TY591-716	上轮钱倒针电磁阀		1
BF747	B01001088	TY9910-106	固定环		2
BF748	B01001080	TY9910-094	紧定螺钉	M6*0.75*6	2

08. 右邊座機構 RIGHT SIDE BRACKET MECHANISM

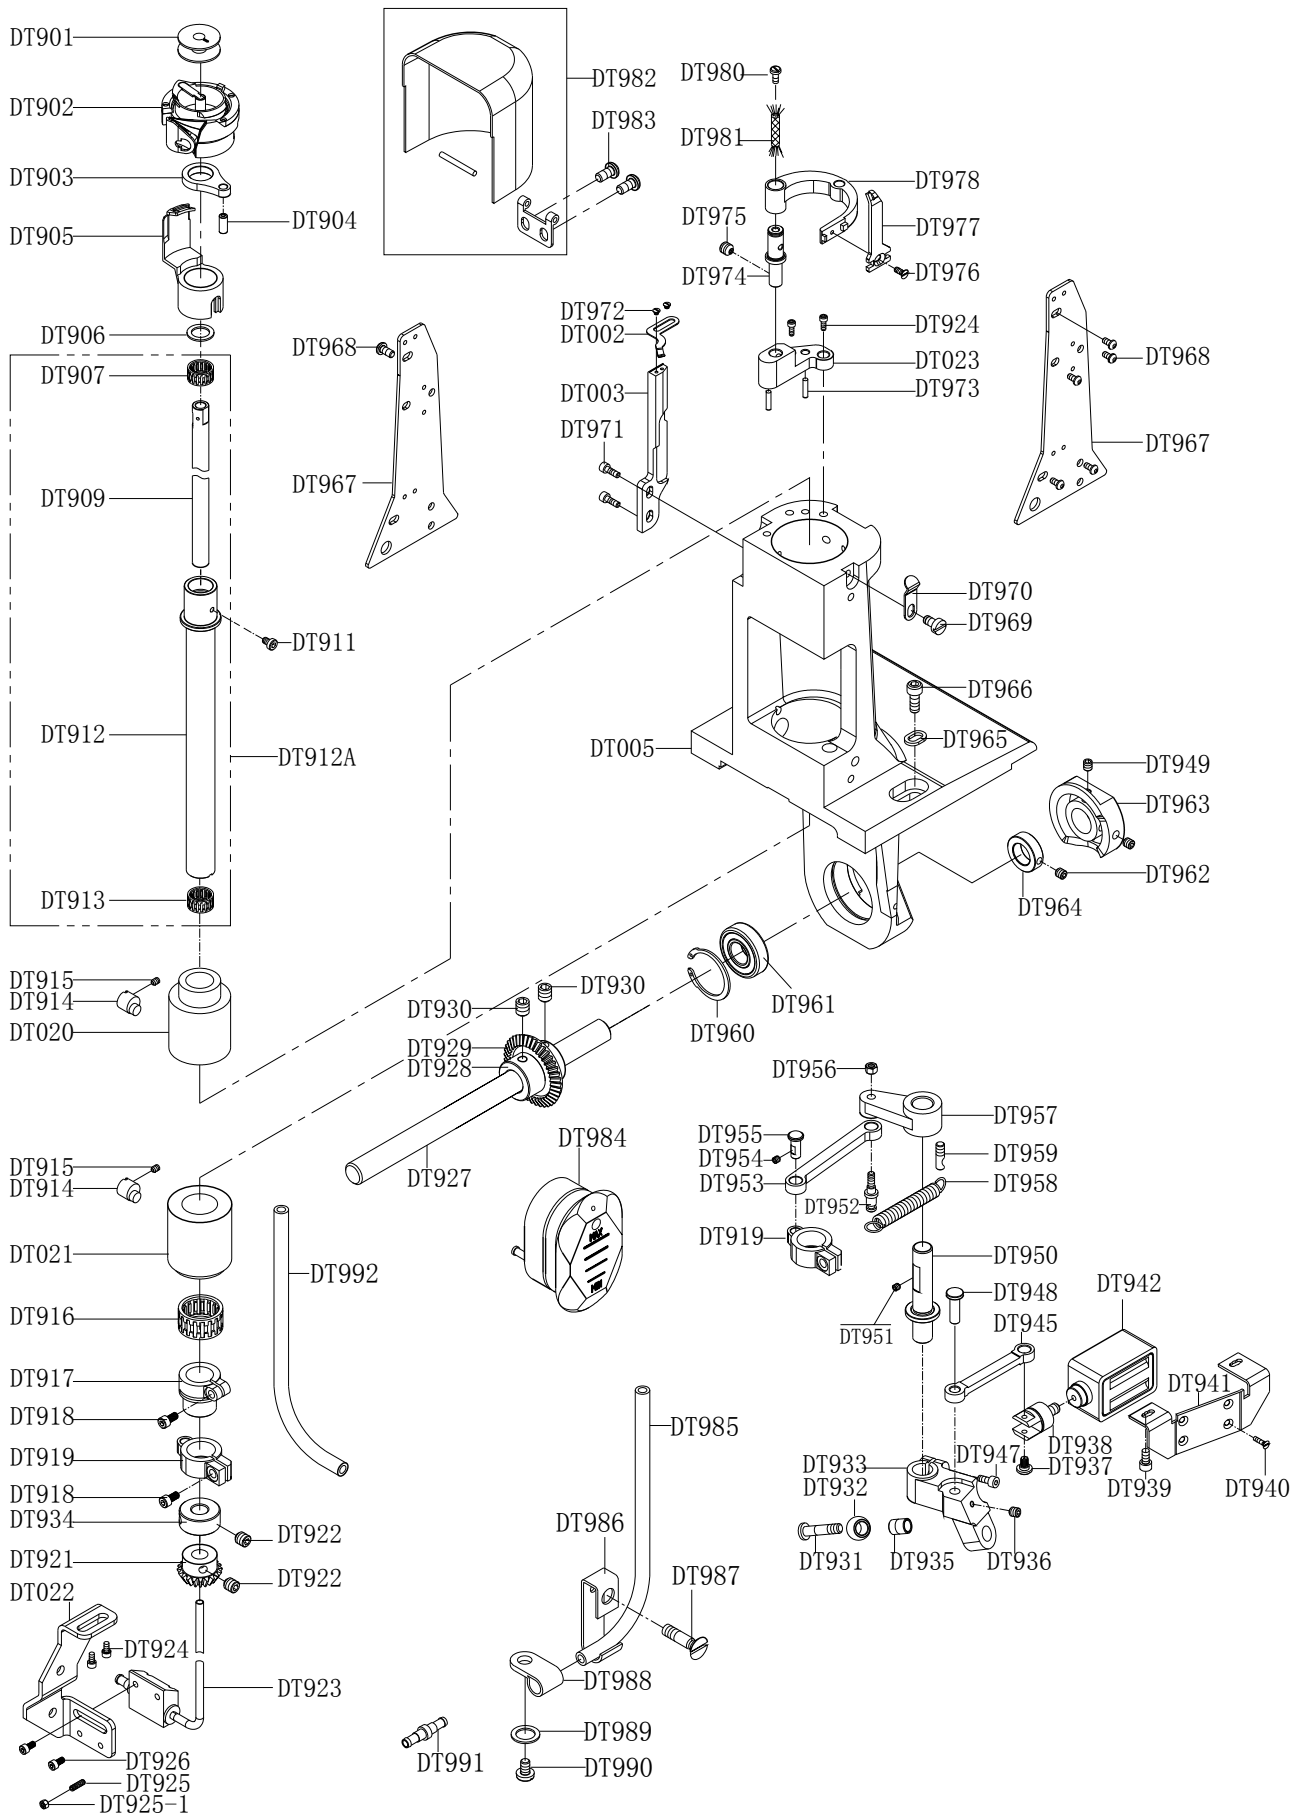

08. TY9628 右边座机构零件明细


分解图号	用友编码	零件图号	零件名称	备注	用量
DT002	B0102002	TY9628BFT-DT002	夹线弹片		1
DT003	B0102003	TY9628BFT-DT003	夹线弹片座		1
DT005	B0102005	TY9628BFT-DT005	单针边座		1
DT020	B0102009	TY9628BFT-DT020	釜轴大套管		1
DT021	B0102010	TY9628BFT-DT021	釜轴下衬套		1
DT022	B0102011	TY9628BFT-DT022	油管支架		1
DT023	B0102012	TY9628BFT-DT023	牛角座接块		1
DT901	B01001264	TY9910-242	梭仔子		1
DT902	B01013048	TY9630-LZ15	旋梭		1
DT903	B01013023	TY9630-LZ36	牛角摆杆		1
DT904	B01013077	TY9630-LZ37	牛角摆杆销		1
DT905	B01013024	TY9630-LZ38	动刀		1
DT906	B01013068	TY9630-LZ41-2	平垫片		1
DT911	C01227	GB/T70.1	内六角圆柱头螺钉	M4*4	1
DT912A	B01013014		釜轴套管（组件）		1
DT914	B01001243	TY9910-261-1	调整销		2
DT915	C01093	GB/T80	内六角凹端紧定螺钉	M4X6	2
DT916		TY591-906S	滚针轴承		1
DT917	B01013087	TY9630-LZ089A	釜轴下锁圈		1
DT918	C01134	GB/T70.1	内六角圆柱头螺钉	M4X10	2
DT919	B01013039	TY9630-LZ82	刀轴摆杆		1
DT920	B01001233	TY9910-2506	定环		1
DT921	B01006044	TY9910-257	小齿轮		1
DT923	B01013062	TY9630-LZ120	油管组件		1
DT924	C01134	GB/T70.1	内六角圆柱头螺钉	M4X10	4
DT925	C01235	GB/T80	内六角凹端紧定螺钉	M3X8	2
DT925-1	C01067	GB/T6172.1	六角薄螺母	M3	2
DT926	C01142	GB/T70.1	内六角圆柱头螺钉	M3X8	2
DT927	B01001171	TY9910-196B	万向连接轴（短）		1
DT928	B01006043	TY591-855-1	定环		1
DT929	B01006048	TY9910-258	大齿轮		1
DT930	B01001080	TY9910-094	螺钉	M6*0.75*6	4
DT931	B01013063	TY9630-LZ66-1	凸轮销A		1
DT932	B01013050	TY9630-LZ67	钢球		1
DT933	B01013034	TY9630-LZ65	剪线定位座		1
DT935	B01013064	TY9630-LZ66-2	隔套		1
DT936	C01092	GB/T80	内六角凹端紧定螺钉	M4X4	1
DT937	B03001154	TY335-103-01	提升把手销		1
DT938	B01013054	TY9630-LZ57	拉杆接头		1
DT939	C01137	GB/T70.1	内六角圆柱头螺钉	M5X10	2
DT940	C01103	GB/T70.3	内六角沉头螺钉	M4X8	4
DT941	B01013032	TY9630-LZ53	电池铁固定板		1
DT942	B01007083	TY591-640	电池铁		1
DT945	B01013033	TY9630-LZ61	剪线拉杆		1
DT947	C01137	GB/T70.1	内六角圆柱头螺钉	M5X10	1
DT948	B01013049	TY9630-LZ47	摆动拉杆销		1
DT949	C01212	GB/T80	内六角凹端紧定螺钉	M6*6	2
DT950	B01013027	TY9630-LZ43	剪线摆杆轴		1
DT951	C01086	GB/T80	内六角凹端紧定螺钉	M5*6（发黑）	1
DT952	B01013030	TY9630-LZ49	摆杆销		1
DT953	B01013029	TY9630-LZ46	摆动拉杆		1
DT954	C01087	GB/T80	内六角凹端紧定螺钉	M3X6	1
DT955	B01013049	TY9630-LZ47	摆动拉杆销		1
DT956	C01074	GB/T6170	螺母	M4	1
DT957	B01013028	TY9630-LZ44	剪线摆杆		1
DT958	B01007076	TY591-628	拉簧		1
DT959	B01007020	TY591-231	拉杆销		1
DT960	C01040	GB/T893.1	孔用挡圈	28	2
DT961	B94049	GB/T276-94	轴承	6001-2RZ	2
DT962	C01083	GB/T80	内六角凹端紧定螺钉	M4*5	2
DT963	B01013037	TY9630-LZ79	剪线凸轮		1
DT964	B01006043	TY591-855-1	锁圈		2
DT965	B01001186	TY9910-208-1	垫片		4
DT966	C0194	GB/T70.1	内六角圆柱头螺钉	M6*16	4
DT967	B01007126	TY591-852	边盖板		2
DT968	C01266	GB/T70.2	内六角平圆头螺钉	M4X8（镀镍）	8
DT969	B01007109	TY591-823	开槽圆柱头螺钉	M4*6	1
DT970	B01007110	TY591-824	弹簧板		1
DT971	C01142	GB/T70.1	内六角圆柱头螺钉	M3*8（发黑）	2
DT972	B01013001	TY9630-LZ01	动刀螺丝		2
DT973	C01280	GB/T119	圆柱销	3*8	2
DT974	B01013084	TY9630-LZ024A	牛角座销		1
DT975	C01093	GB/T80	内六角凹端紧定螺钉	M4X6	1
DT976	B01013073	TY9630-LZ23	牛角螺钉		1
DT977	B01013018	TY9630-LZ22	牛角		1
DT978	B01013017	TY9630-LZ21	牛角座		1
DT980	B01013085	TY9630-LZ024-2	牛角销螺钉		1
DT981		TY9630-LZ148	油棉		0
DT982	B01002015	TY9910-266	釜盖组件		1
DT983	B01001221	TY9910-247	一字圆柱头螺丝		2
DT984	D0101263	TY9618-866B	油镜		1
DT985	B01007252	TY591-860	油管		1
DT986	B01007128	TY591-861	线卡		1
DT987	B01007129	GB/T68 TY591-862	开槽沉头螺钉		1
DT988	B01007127	TY591-857	油管护架		1
DT989	C01023	GB/T95	平垫圈		1
DT990	C01147	GB/T70.1	内六角圆柱头螺钉	M4x12（发黑）	1
DT991	B01007131	TY591-865	油管接头		1
DT992	B01007252	TY591-809	油管		1

This diagram illustrates the exploded view of a mechanical assembly, likely a pump or motor component. The main assembly is shown in the center, with various sub-assemblies and individual parts labeled with numbers and codes. The components are organized into several distinct groups:

- Top Left Group:** Includes parts 965B-01 through 965B-10, 965B-03, 965B-04, 965B-05, 965B-06, 965B-07, 965B-08, 965B-09, 966-1, 966B, 966-2, 957-1, 957-2, 964, 956-4, 956-1, 956-2, 956-3, 956-5, 957, 961, 961-1, and 969B.
- Top Right Group:** Includes DT001, DT006, DT007, 920-1 through 920-13, 920-14, 920-15, 920-16, 920-17, 920-18, 920-19, 920-20, 920-21, 920-22, 920-23, 920-24, 920-25, 920-26, 920-27, 920-28, 920-29, 920-30, 920-31, 920-32, 920-33, 920-34, 920-35, 920-36, 920-37, 920-38, 920-39, 920-40, 920-41, 920-42, 920-43, 920-44, 920-45, 920-46, 920-47, 920-48, 920-49, 920-50, 920-51, 920-52, 920-53, 920-54, 920-55, 920-56, 920-57, 920-58, 920-59, 920-60, 920-61, 920-62, 920-63, 920-64, 920-65, 920-66, 920-67, 920-68, 920-69, 920-70, 920-71, 920-72, 920-73, 920-74, 920-75, 920-76, 920-77, 920-78, 920-79, 920-80, 920-81, 920-82, 920-83, 920-84, 920-85, 920-86, 920-87, 920-88, 920-89, 920-90, 920-91, 920-92, 920-93, 920-94, 920-95, 920-96, 920-97, 920-98, 920-99, 920-100, 920-101, 920-102, 920-103, 920-104, 920-105, 920-106, 920-107, 920-108, 920-109, 920-110, 920-111, 920-112, 920-113, 920-114, 920-115, 920-116, 920-117, 920-118, 920-119, 920-120, 920-121, 920-122, 920-123, 920-124, 920-125, 920-126, 920-127, 920-128, 920-129, 920-130, 920-131, 920-132, 920-133, 920-134, 920-135, 920-136, 920-137, 920-138, 920-139, 920-140, 920-141, 920-142, 920-143, 920-144, 920-145, 920-146, 920-147, 920-148, 920-149, 920-150, 920-151, 920-152, 920-153, 920-154, 920-155, 920-156, 920-157, 920-158, 920-159, 920-160, 920-161, 920-162, 920-163, 920-164, 920-165, 920-166, 920-167, 920-168, 920-169, 920-170, 920-171, 920-172, 920-173, 920-174, 920-175, 920-176, 920-177, 920-178, 920-179, 920-180, 920-181, 920-182, 920-183, 920-184, 920-185, 920-186, 920-187, 920-188, 920-189, 920-190, 920-191, 920-192, 920-193, 920-194, 920-195, 920-196, 920-197, 920-198, 920-199, 920-200, 920-201, 920-202, 920-203, 920-204, 920-205, 920-206, 920-207, 920-208, 920-209, 920-210, 920-211, 920-212, 920-213, 920-214, 920-215, 920-216, 920-217, 920-218, 920-219, 920-220, 920-221, 920-222, 920-223, 920-224, 920-225, 920-226, 920-227, 920-228, 920-229, 920-230, 920-231, 920-232, 920-233, 920-234, 920-235, 920-236, 920-237, 920-238, 920-239, 920-240, 920-241, 920-242, 920-243, 920-244, 920-245, 920-246, 920-247, 920-248, 920-249, 920-250, 920-251, 920-252, 920-253, 920-254, 920-255, 920-256, 920-257, 920-258, 920-259, 920-260, 920-261, 920-262, 920-263, 920-264, 920-265, 920-266, 920-267, 920-268, 920-269, 920-270, 920-271, 920-272, 920-273, 920-274, 920-275, 920-276, 920-277, 920-278, 920-279, 920-280, 920-281, 920-282, 920-283, 920-284, 920-285, 920-286, 920-287, 920-288, 920-289, 920-290, 920-291, 920-292, 920-293, 920-294, 920-295, 920-296, 920-297, 920-298, 920-299, 920-300, 920-301, 920-302, 920-303, 920-304, 920-305, 920-306, 920-307, 920-308, 920-309, 920-310, 920-311, 920-312, 920-313, 920-314, 920-315, 920-316, 920-317, 920-318, 920-319, 920-320, 920-321, 920-322, 920-323, 920-324, 920-325, 920-326, 920-327, 920-328, 920-329, 920-330, 920-331, 920-332, 920-333, 920-334, 920-335, 920-336, 920-337, 920-338, 920-339, 920-340, 920-341, 920-342, 920-343, 920-344, 920-345, 920-346, 920-347, 920-348, 920-349, 920-350, 920-351, 920-352, 920-353, 920-354, 920-355, 920-356, 920-357, 920-358, 920-359, 920-360, 920-361, 920-362, 920-363, 920-364, 920-365, 920-366, 920-367, 920-368, 920-369, 920-370, 920-371, 920-372, 920-373, 920-374, 920-375, 920-376, 920-377, 920-378, 920-379, 920-380, 920-381, 920-382, 920-383, 920-384, 920-385, 920-386, 920-387, 920-388, 920-389, 920-390, 920-391, 920-392, 920-393, 920-394, 920-395, 920-396, 920-397, 920-398, 920-399, 920-400, 920-401, 920-402, 920-403, 920-404, 920-405, 920-406, 920-407, 920-408, 920-409, 920-410, 920-411, 920-412, 920-413, 920-414, 920-415, 920-416, 920-417, 920-418, 920-419, 920-420, 920-421, 920-422, 920-423, 920-424, 920-425, 920-426, 920-427, 920-428, 920-429, 920-430, 920-431, 920-432, 920-433, 920-434, 920-435, 920-436, 920-437, 920-438, 920-439, 920-440, 920-441, 920-442, 920-44

09.1 TY9628 单针中座机构零件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
Z27	B01001335	TY9910-039	针状培林		2
Z32	B01001048	TY9910-042	油棉垫		4
817	C01040	GB/T 893.1	孔用挡圈 28		1
870	B94049	GB/T 276-94	轴承6001-2RZ		1
870-1	B01006043	TY591-855-1	定环		1
870-2	C01083	GB/T 80-2000	内六角凹端紧定螺钉	M4*5	2
DT001	B0102001	TY9628BFT-DT001	针板	组件供应	1
DT006	B01013003	TY9630-LZ03	定刀		1
DT007	B01013001	TY9630-LZ01	动力螺丝		1
DT024		TY9628-DT024	单针中座		1
902	B01001186	TY9910-208-1	垫片		2
903	C01132	GB/T70.1	内六角圆柱头螺钉	M5x12 (发黑)	2
904	B01001187	TY9910-209	一字圆柱头螺丝		1
905	C0194	GB/T70.1	内六角圆柱头螺钉	M6X16 (镀镍)	2
906	B01001186	TY9910-208-1	垫片		2
907	B01001188	TY9910-210	调整销		1
908	C0193	GB/T68	开槽沉头螺钉	M4x8 (镀镍)	2
909	C01091	GB/T80-2000	内六角凹端紧定螺钉	M4X8	1
910	D0101269	TY9618-120	压棒盖		1
912	B01006040	TY9910-240	中座小齿轮		2
913	B01001080	TY9910-094	螺钉	M6*0.75*6	6
914	B01006006	TY9910-239	中座小齿轮		1
915	C01085	GB/T80-2000	内六角凹端紧定螺钉	M5X4	2
916	B01006117	TY9922BFT-09-916	套管		1
916A	B01001212	TY9910-238	下套管		1
916C	B94023	TY168-0596	滚针轴承		1
917	B01001210	TY9910-236	中座轴		1
918	C01085	GB/T80-2000	内六角凹端紧定螺钉	M5X4	4
919	B01001208	TY9910-234	轴连接器		2
920	B01007283	TY591-920	单针送金组件		1
921	B01001209	TY9910-235	塑料接头		1
913S	B01001194	TY9910-220	C型扣环		2
914S	B01007326	TY591-914S	调整垫片		1
915S	B0100127	TY9910-221	轴承	608ZZ	2
928S	B01007450	TY591-928NA	单向培林座 NA/SK		2
930S	C01134	GB/T70.1	内六角圆柱头螺钉	M4X10 (发黑) 2	4
941S	C01022	GB/T95	平垫圈	M4	2
942S	C01139	GB/T70.1	内六角圆柱头螺钉	M4X8 (发黑)	2
948S	B01007032	TY591-330	下送金倒针电磁阀		1
951S	C01130	GB/T70.1	内六角圆柱头螺钉	M5X8 (发黑)	3
913DG	B01016001	TY9922BFT-913DG	摆杆座		1
914DG	C01134	GB/T70.1	内六角圆柱头螺钉	M4X10 (发黑) 2	2
915DG	C01092	GB/T80-2000	内六角凹端紧定螺钉	M4X4	1
916DG	B01016002	TY9922BFT-916DG	培林轴		1
917DG	B01016003	TY9922BFT-917DG	培林轴接块		1
918DG	C01140	GB/T70.1	内六角圆柱头螺钉	M2.5*5	2
919DG	C0227	GB/T119	圆柱销 3*8 h6级		2
920DG	B01016004	TY9922BFT-920DG	下倒缝摆杆		1
921DG	B01016005	TY9922BFT-921DG	拉簧固定座		1
923DG	B01016007	TY9922BFT-923DG	拉簧		1
924DG	C01019	GB/T70.1	内六角圆柱头螺钉	M3X16 (发黑)	2
925DG	B01001047	TY9910-041	万向连杆		2
926DG	C0203	GB/T894.1	轴用挡圈	16	1
927DG	C0186	GB/T119	圆柱销	3*16	1
928DG	B01007091	TY591-713	摆杆连接块		1
929DG	B01007264	TY591-714	垫片		1
930DG	B01013059	TY9630-121	锥形弹簧		1
940DG	C0228	GB/T119	圆柱销 5*25 h6级		1
941DG	C01294	GB/T70.3-2000	内六角沉头螺钉	M4*16 (发黑)	1
942DG	C01168	GB/T70.1	内六角圆柱头螺钉	M3X20 (发黑)	1
943DG	C01272	GB/T6170	六角螺母	M3 (发黑)	1
944DG	C01023	GB/T95	平垫圈	M5 (发黑)	3
956	B0101202	TY9618-956	开关压板		1
956-1	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5*6	1
956-2	C01022	GB/T95	平垫圈	M4	1
956-3	B0101218	TY9618-956-3	限位柱		2
956-4	B03001199	TY335-140	栓销弹簧		1
956-5	C01086	GB/T80	内六角凹端紧定螺钉	M5*6	1
957	D0101261	TY9618-957A	倒缝把手座		1
957-1	C01243	GB/T70.3-2000	内六角沉头螺钉	M5*8	2
957-2	C01225	GB/T70.1	内六角圆柱头螺钉	M3X14 (发黑) 2	2
961	B01001233	TY9910-250G	定环		1
961-1	B01001080	TY9910-094	螺钉	M6*0.75*6	1
964	B0101213	TY9618-964	倒缝把手轴		1
965B-01	B0101267	TY9618-965B-01	倒缝把手		1
965B-02	B0101268	TY9618-965B-02	旋转把手组		1
965B-03	B0101269	TY9618-965B-03	固定销		1
965B-06	C01083	GB/T80-2000	内六角凹端紧定螺钉	M4*5	1
965B-05	B01007022	TY591-239	锁圈		1
965B-04		TY9618-965B-06	弹簧		1
965B-07		TY9618-965B-07	钢珠Sφ8		1
965B-08	C01272	GB/T6170	六角螺母	M3	2
965B-09		GB/T95	平垫圈	M3	2
965B-10	C01287	ISO7380-2-2011	内六角圆头带垫螺钉	M3*16	1
966B	B0101271	TY9618-966B	倒缝摆杆		1
966-1	C01134	GB/T70.1	内六角圆柱头螺钉	M4X10	2
966-2	C01134	GB/T70.1	内六角圆柱头螺钉	M4X10	2
969B	B01007063	TY591-562	点动开关		1

09.2 单针中座机构(选配) SINGLE NEEDLE CENTRAL BRACKET MECHANISM

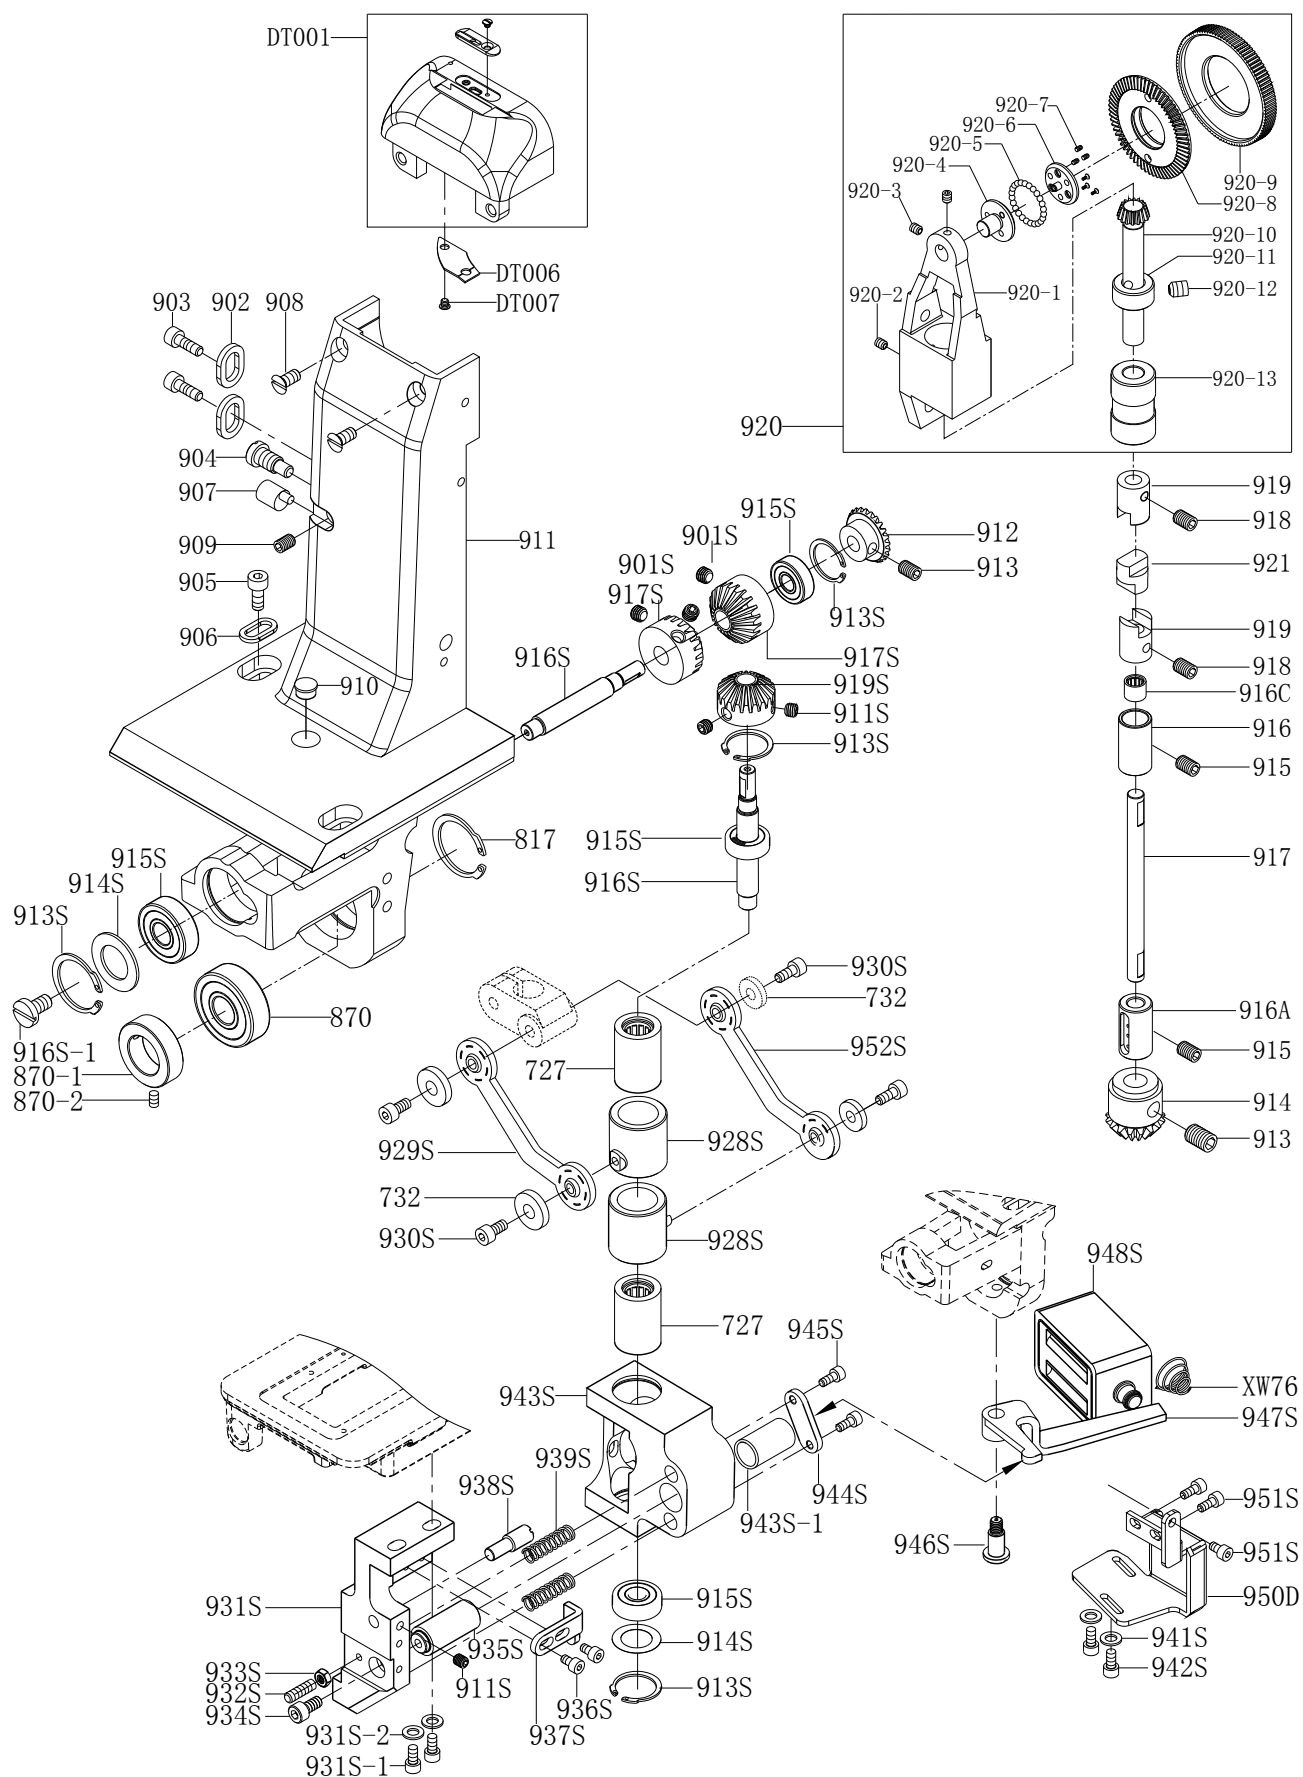

09.2 TY9618 单针中座机构零件明细 (选配)					
分解图号	用友编码	零件图号	零件名称	备注	用量
DT001	B0102001	TY9628BFT-DT001	针板	组件供应	1
DT006	B01013003	TY9630-LZ03	定刀		1
DT007	B01013001	TY9630-LZ01	动力螺丝		1
DT024		TY9628-DT024	单针中座		1
817	C01040	GB/T 893. 1	孔用挡圈 28		1
870	B94049	GB/T 276-94	轴承6001-2RZ		1
870-1	B01006043	TY591-855-1	定环		1
870-2	C01083	GB/T 80-2000	内六角凹端紧定螺钉	M4*5	2
902	B01001186	TY9910-208-1	垫片		2
903	C01132	GB/T70. 1	内六角圆柱头螺钉	M5x12 (发黑)	2
904	B01001187	TY9910-209	一字圆柱头螺丝		1
905	C0194	GB/T70. 1	内六角圆柱头螺钉	M6X16 (镀镍)	2
906	B01001186	TY9910-208-1	垫片		2
907	B01001188	TY9910-210	调整销		1
908	C0193	GB/T68	开槽沉头螺钉	M4x8 (镀镍)	2
909	C01091	GB/T80-2000	内六角凹端紧定螺钉	M4X8	1
910	D0101269	TY9618-120	压棒盖		1
911	B01007134	TY591-911	单针中座		1
912	B01006040	TY9910-240	中座小齿轮		1
913	B01001080	TY9910-094	螺钉	M6*0. 75*6	4
914	B01006006	TY9910-239	中座小齿轮		1
915	C01085	GB/T80-2000	内六角凹端紧定螺钉	M5X4	2
916	B01006117	TY9922BFT-09-916	套管		1
916A	B01001212	TY9910-238	下套管		1
916C	B94023	TY168-0596	滚针轴承		1
917	B01001210	TY9910-236	中座轴		1
918	C01085	GB/T80-2000	内六角凹端紧定螺钉	M5X4	4
919	B01001208	TY9910-234	轴连接器		2
920	B01007283	TY591-920	单针送金组件		1
921	B01001209	TY9910-235	塑料接头		1
901S	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	4
913S	B01001194	TY9910-220	C型扣环		2
914S	B01007326	TY591-914S	调整垫片		1
915S	B0100127	TY9910-221	轴承	608ZZ	2
916S	B01001197	TY9910-224	培林轴		1
916S-1	B01001052	TY9910-051	螺钉 M4*0. 7*8		1
917S	B01007287	TY591-917S	锥形齿轮		2
727	B01001335	TY9910-039	针状培林		2
732	B01001048	TY9910-042	油棉垫		2
911S	C01086	GB/T80-2000	内六角凹端紧定螺钉	M5X6	3
913S	B01001194	TY9910-220	C型扣环		2
914S	B01007326	TY591-914S	调整垫片		1
915S	B0100127	TY9910-221	轴承	608ZZ	2
916S	B01001197	TY9910-224	培林轴		1
919S	B01007288	TY591-919S	锥形齿轮		1
928S	B01007450	TY591-928NA	单向培林座 NA/SK		2
929S	B01007294	TY591-929S	万向连杆A		1
930S	C01134	GB/T70. 1	内六角圆柱头螺钉	M4X10 (发黑)	2
931S	B01007295	TY591-931S	倒针座		1
931S-1	C01145	GB/T70. 1	内六角圆柱头螺钉	M6*20 (发黑)	2
931S-2	C01020	GB/T95	平垫圈	M6	2
932S	C0177	GB/T77-2000	内六角平端紧定螺钉	M4X16	1
933S	C01074	GB/T6170	六角螺母	M4	1
934S	C01137	GB/T70. 1	内六角圆柱头螺钉	M5X10 (发黑)	1
935S	B01007458	TY591-935D	滑动销		1
936S	C01139	GB/T70. 1	内六角圆柱头螺钉	M4X8 (发黑)	2
937S	B01007297	TY591-937S	滑块限位座		1
938S	B01007242	TY591-938S	调节销		1
939S	B01007299	TY591-939S	压簧		2
941S	C01022	GB/T95	平垫圈	M4	2
942S	C01139	GB/T70. 1	内六角圆柱头螺钉	M4X8 (发黑)	2
943S	B01007302	TY591-943S	倒针滑块		1
943S-1	B01007455	TY591-943S-1	滑套		1
944S	B01007303	TY591-944S	顶杆挡块		1
945S	C01142	GB/T70. 1	内六角圆柱头螺钉	M3X8 (发黑)	2
946S	B01007304	TY591-946S	螺钉		1
947S	B01007305	TY591-947S	顶杆		1
948S	B01007032	TY591-330	下送金倒针电磁阀		1
950D	B01006246	TY9922BFT-950D	下倒针电磁阀座		1
951S	C01130	GB/T70. 1	内六角圆柱头螺钉	M5X8 (发黑)	3
952S	B01007308	TY591-952S	万向连杆B		1
XW76	B01013059	TY9630-121	锥形弹簧		1

10 隨機附件 ACCESSORIES

The diagram illustrates the random accessories for the device, organized into several sections:

- Top Left:** A bracket assembly (F003B-01, F003B-02, F003B-05) and a vertical support structure (F003B-03, F003B-04, F003B-06, F003B-07, F003B-08, F003B-09, F003B-10).
- Top Center:** A rectangular box (F030).
- Top Right:** A small rectangular box (F004) and a larger rectangular box (F005).
- Middle Left:** A spray bottle (F002), a small rectangular box (F012), a small rectangular box (F013), and a screwdriver (F011).
- Middle Right:** A small rectangular box (F001) with a handle (F009), a small rectangular box (F006), a small rectangular box (F027), and a small rectangular box (F010).
- Bottom Left:** A large rectangular box (F025) and a small rectangular box (F026).
- Bottom Center:** A small rectangular box (F014) and a small rectangular box (F015).
- Bottom Right:** A small rectangular box (F017) and a small rectangular box (F019A).

Assembly instructions for the bottom right section:

- 根据客户要求配置 (According to customer requirements)
- 根据客户要求配置 (According to customer requirements)

10. TY9628 随机附件明细					
分解图号	用友编码	零件图号	零件名称	备注	用量
F001	E04008	TY9910-289	内六角扳手2.0	2	1
	E04009		内六角扳手2.5	2.5	1
	E04010		内六角扳手3	3	1
	E04011		内六角扳手4	4	1
	E04012		内六角扳手5	5	1
F002	E04044	TY9922BFT-F002	横嘴油壶		1
F003B-01	D0101264	TY9168-F003B-01	线架盘		1
F003B-02	D0101265	TY9618-F003B-02	线架		1
F003B-03	B01006148	TY9922BFT-F003A-03	线架螺钉		2
F003B-04	B01006147	TY9922BFT-F003A-04	尼龙挡圈		2
F003B-05	C01212	GB/T80-2000	内六角凹端紧定螺钉	M6*6	2
F003B-06	D0101266	TY9618-F003C-06	支撑杆		2
F003B-07	C01074	GB/T6170-2000	六角螺母	M5	2
F003B-08	D0101268	TY9618-F003B-08	支撑芯		4
F003B-09		GB/T97.1	平垫圈	M5	2
F003B-10	C01034	GB/T93	弹簧垫圈	M5	2
F004	B01007014	TY591-F004	油盘		1
F005	E04006	TY9910-291	工具箱		1
F006	B01001264	TY9910-242	梭仔子		3
F007	C0192	YB/T5002	圆钢钉	8分	0.05KG
F009	E04001	TY9910-293	螺丝起子(小)		1
F010	E04002	TY9910-294	螺丝起子(中)		1
F011	E04003	TY9910-295	螺丝起子(大)		1
F012	B01001342	TY9910-287	枕木(组件)	组件	1
F014	B01006224	TY9910-303	橡胶垫		2
F016	B0101249	TY9618-F016	后纽扣橡胶垫	组件	2
F017	B01006013	TY9922BFT-F017	脚弓组	不含炮台	1
F019A	B01007260	TY591-F019A	靠边组件		1
F022	B01006226	TY591-F022	橡胶垫		2
F027	B01001027	TY9910-18	后纽扣		2
F030	B01006172	TY9922BFT-F034	附件纸箱		1
	B01006173	TY9922BFT-F033	附件装箱盒		1
	D03036		号码牌		1
	D03005	GB 827-86	标牌铆钉/不锈钢		6
	E04046	XH-T002B	机头罩		1
	D02038	说明书	说明书/9922		1
	B0101272	TY9618-155	面罩标牌(TTY)		1
	B0101273	TY9618-156	后标牌(TTY)		1
	D03006		TTY上牌(通用件)		1
	D0101258	TY9618-ZX	9618BFT罗拉车纸箱		1
	B0101248	TY9618-PAOMO	TY9618机身泡沫组件		1
	C0191		木螺丝	5*25	4
	D03041		合格证		1
	E04034		PE袋		1
	B01001257		车针 INDPX5#16		5

11 電器连接圖 ELECTRICITY ELEMENTS FIG

